

Loadspace Trim Panel - 5-Door

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the rear scuff plate trim panel.
Refer to: [Rear Scuff Plate Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the load compartment floor covering mat.



3. Release the clips and remove the loadspace scuff plate trim panel.
Use the General Equipment: Interior Trim Remover

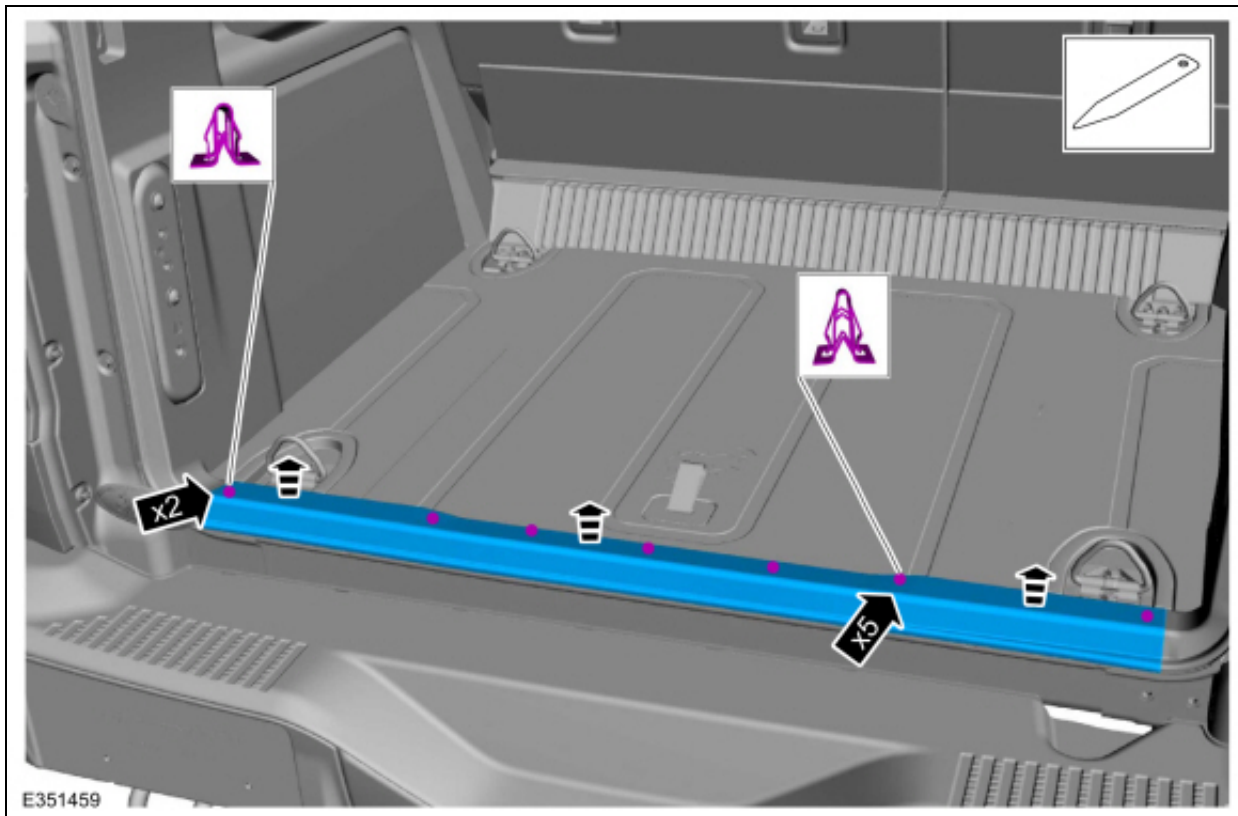


4. Remove the load compartment floor covering tie down covers.

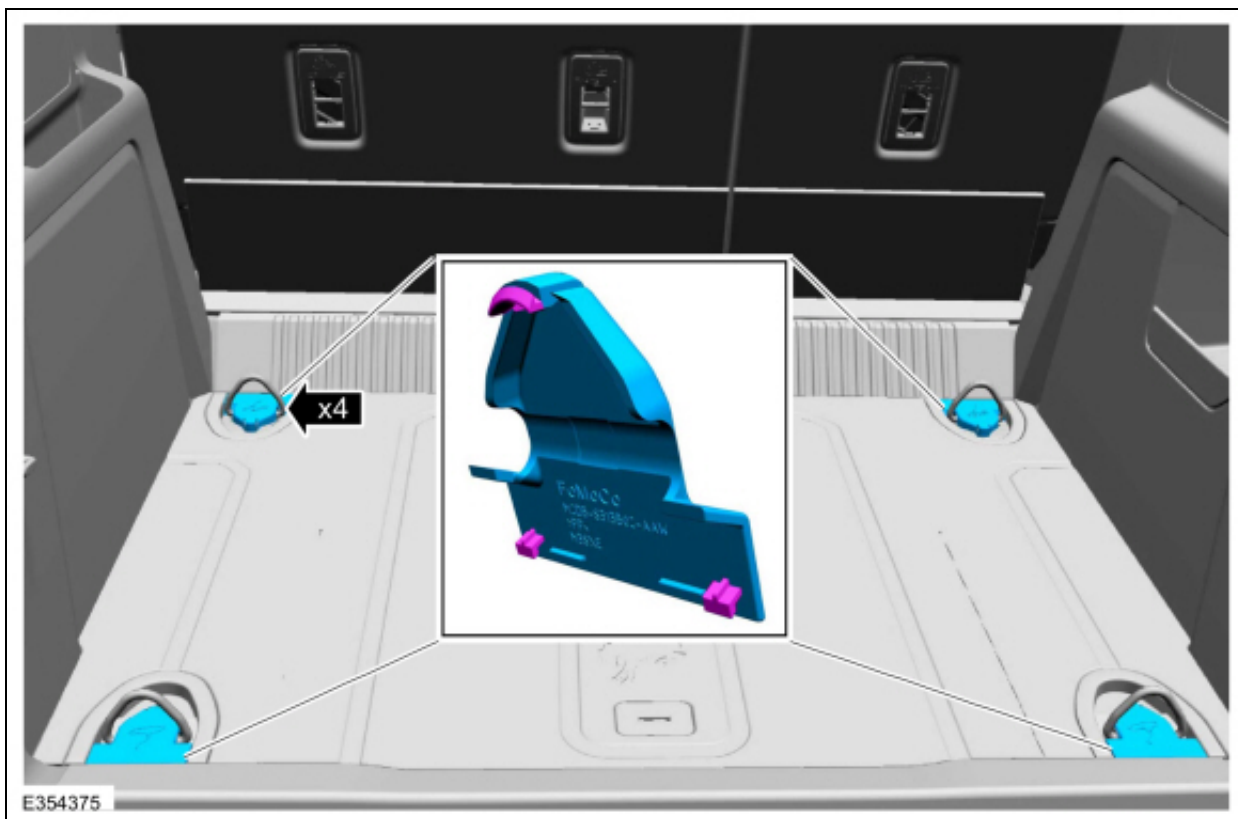


5. Remove the bolts and the load compartment floor covering tie downs.


Torque: 21 lb.ft (28 Nm)

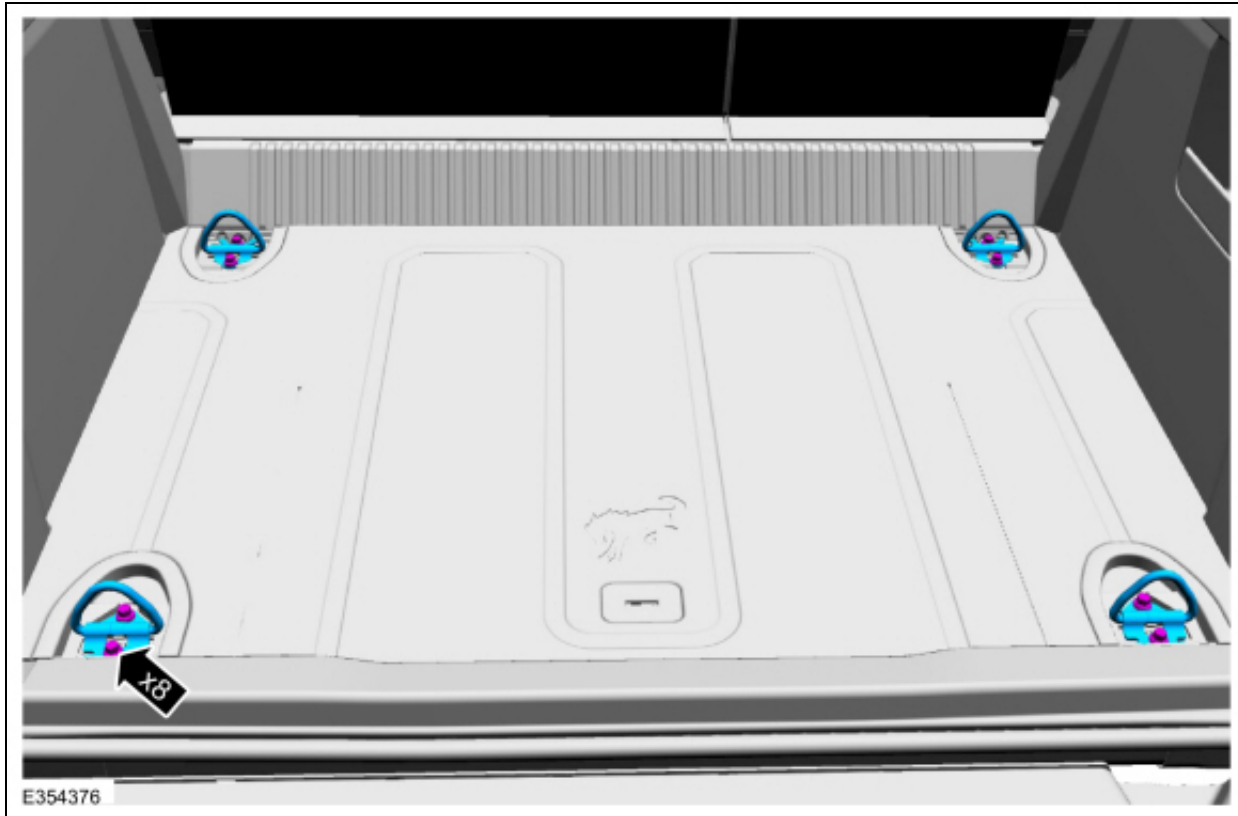

6. Remove the load compartment floor covering.

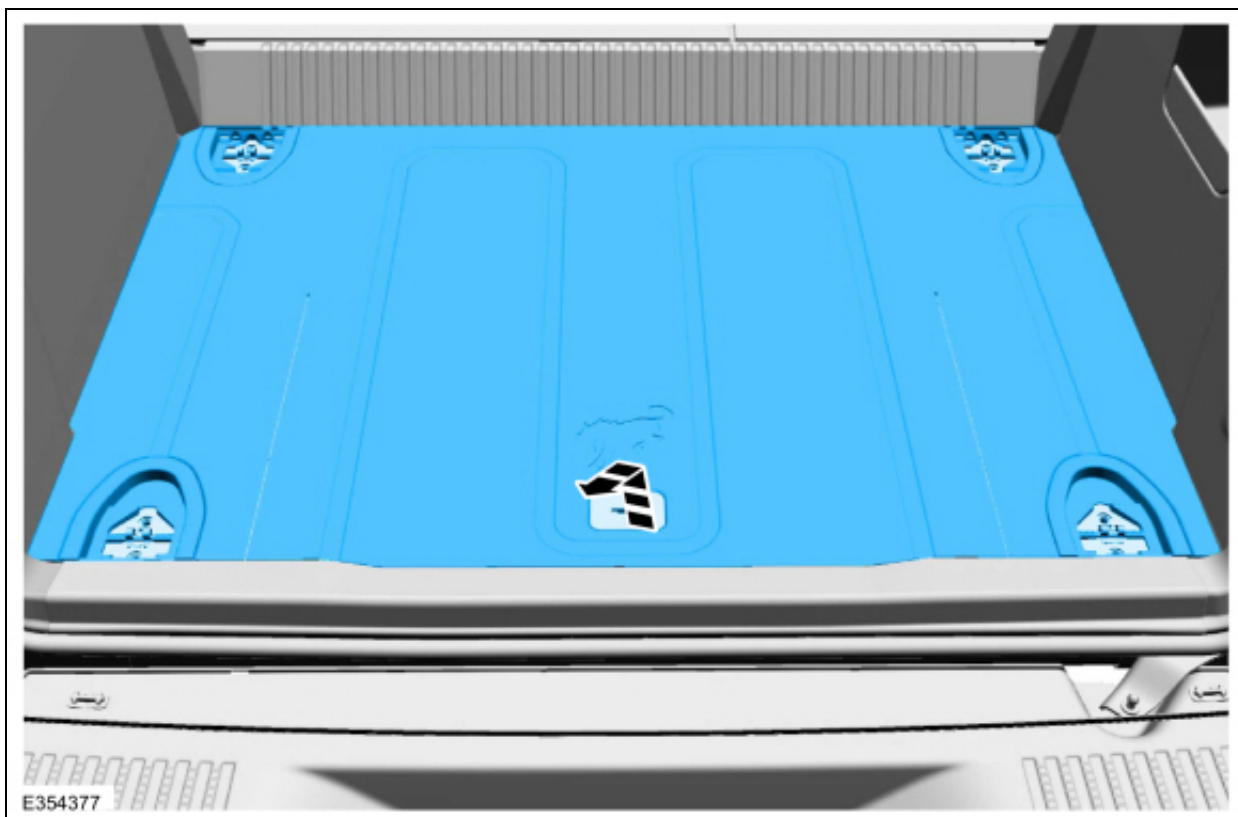

7. Remove the rear cargo trim cover and gap hider.

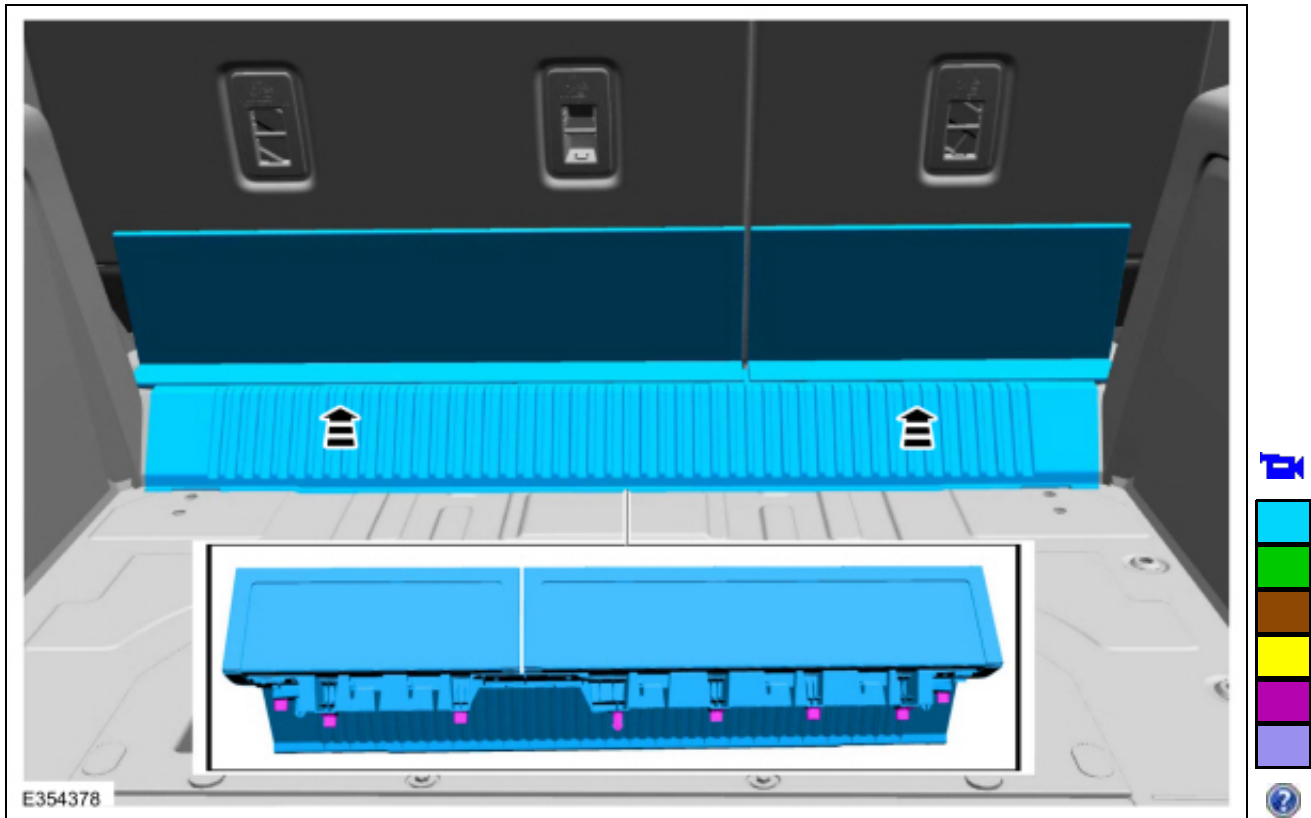


Left hand side

8. **NOTE:** Seats removed for clarity.

Remove the loadspace trim panel.

1. Release the clips.
Use the General Equipment: Interior Trim Remover
2. Disconnect the PATS rear antenna electrical connector.

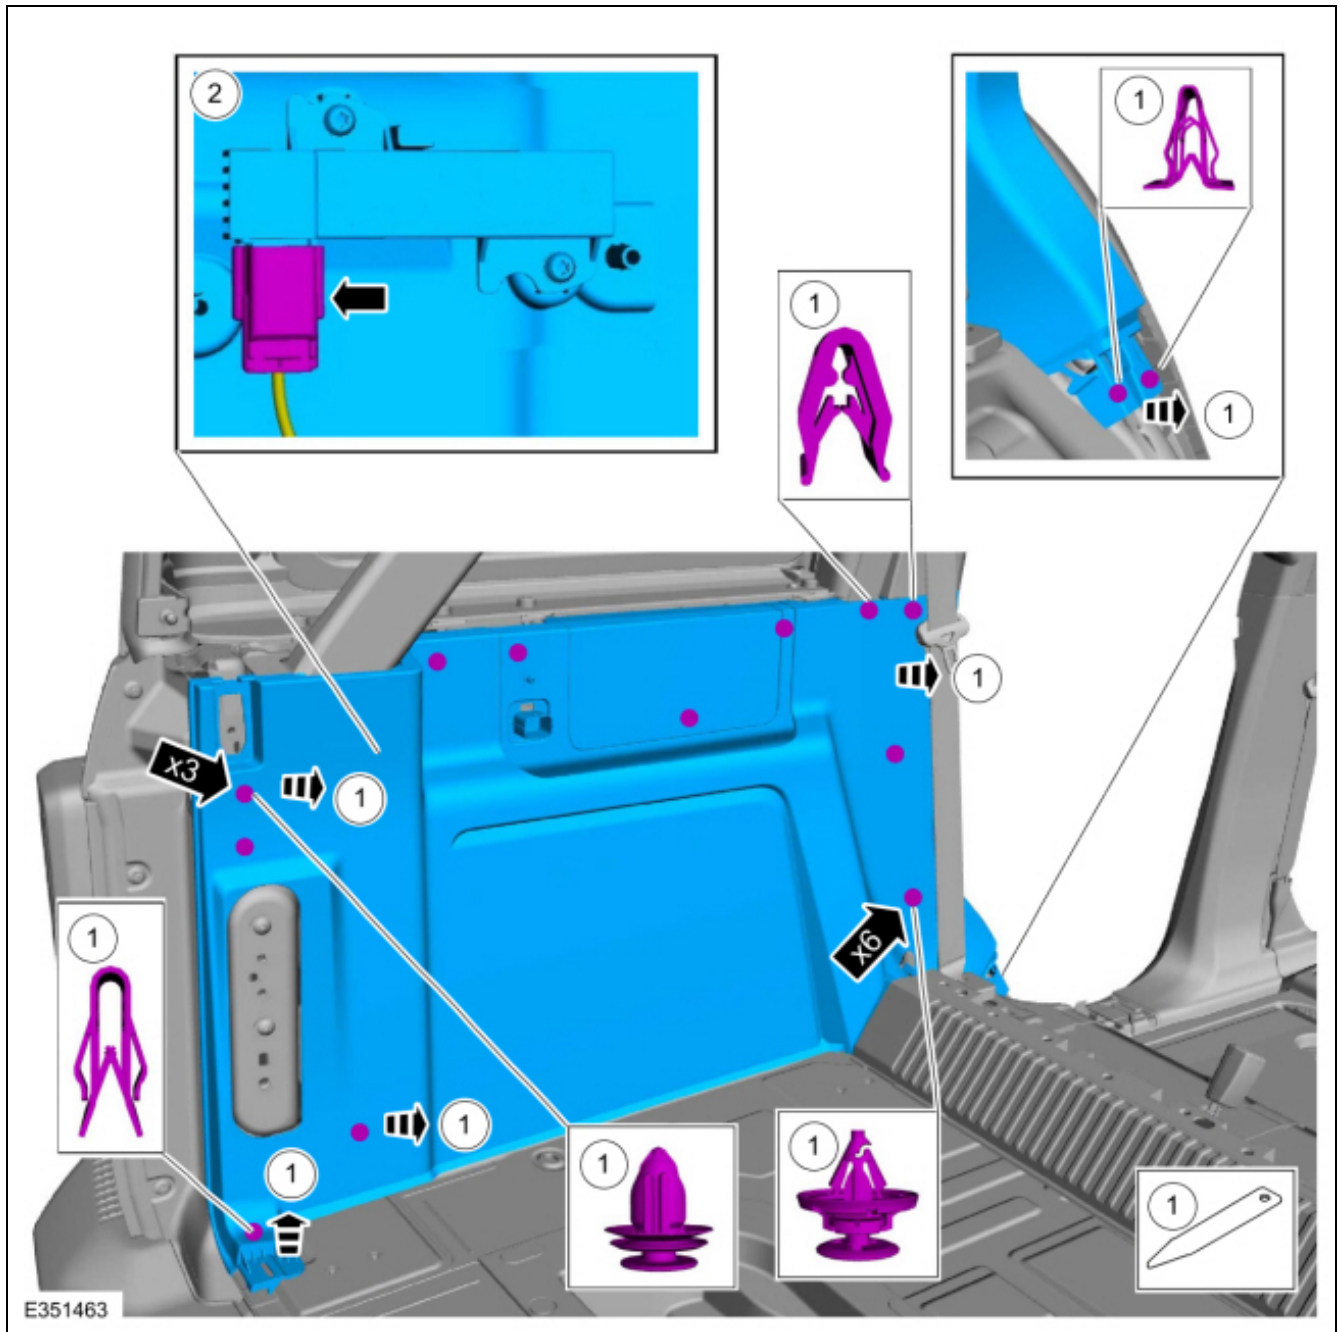


Right hand side

9. **NOTE:** Seats removed for clarity.

Remove the loadspace trim panel.

1. Release the clips.
Use the General Equipment: Interior Trim Remover
2. Disconnect the PATS rear antenna electrical connector.
3. Disconnect the loadspace interior rear light electrical connector.
4. Disconnect the power point electrical connector.

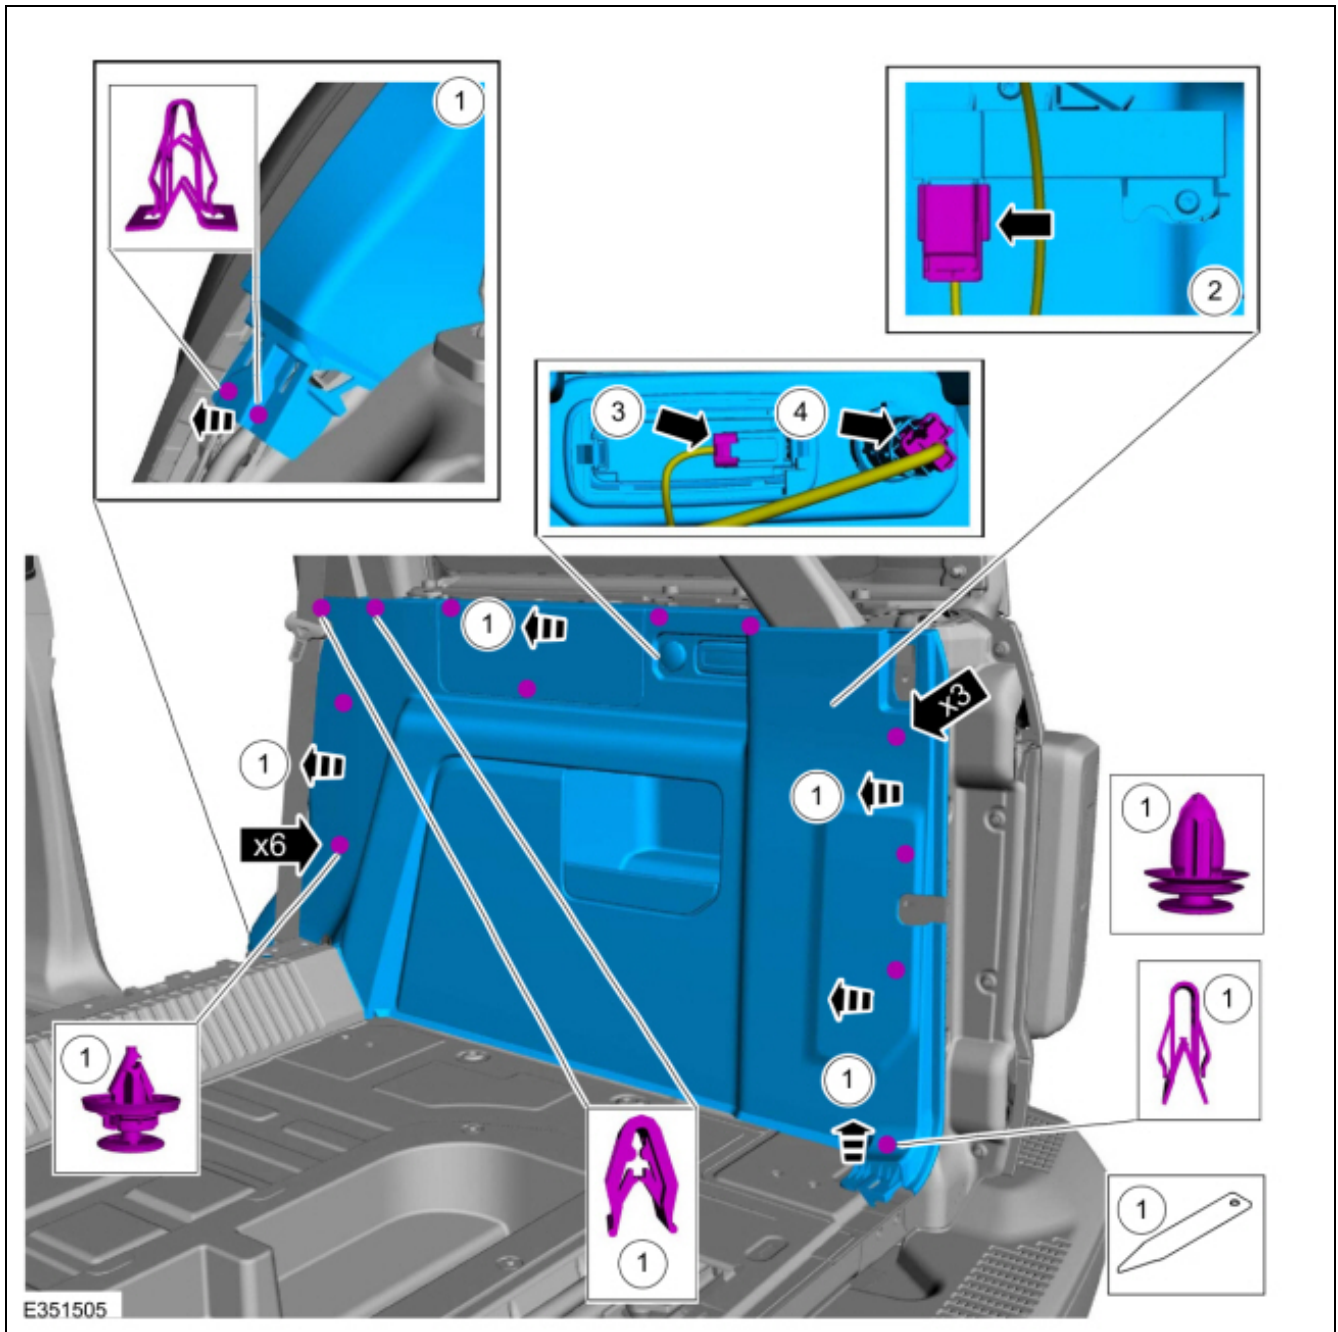

Installation

- NOTE:** If installing a new loadspace trim panel, transfer parts as necessary.

To install, reverse the removal procedure.

© Copyright 2022, Ford Motor Company.

