



## Instrument Panel Center Speaker

### Removal


1. Release the clips and remove the instrument panel center speaker grille.
  - On vehicles equipped with a light sensor.  
Disconnect the electrical connector.

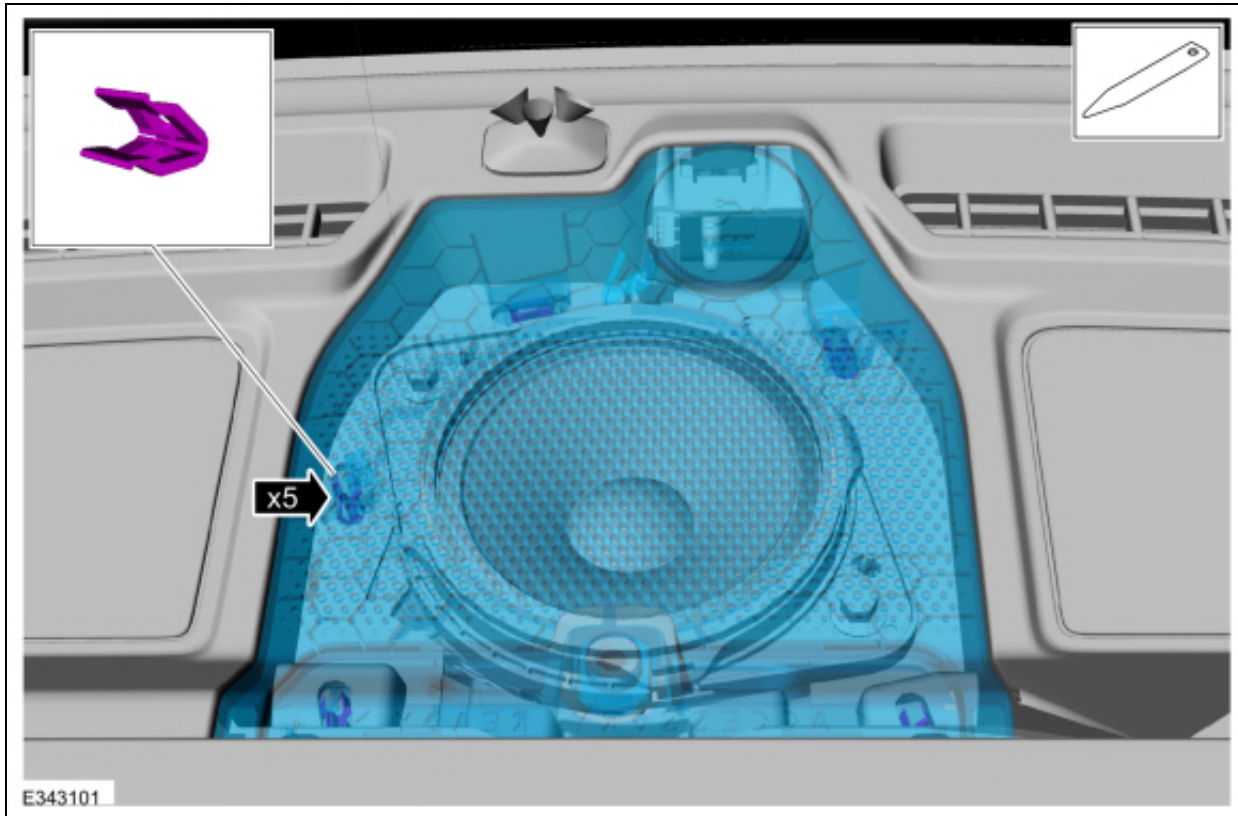

2. Remove the screws and position the instrument panel center speaker up.  
Torque: 19 lb.in (2.2 Nm)

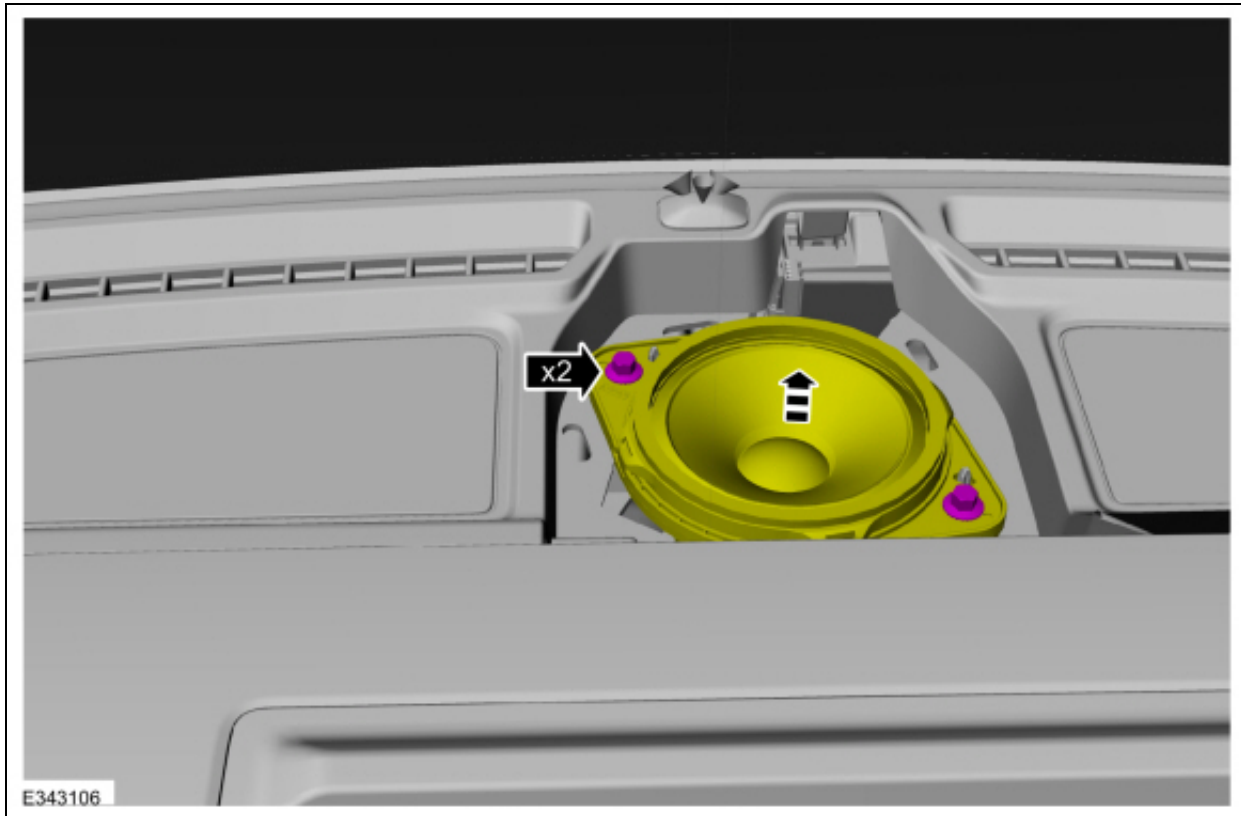

3. Disconnect the electrical connector and remove the instrument panel center speaker.

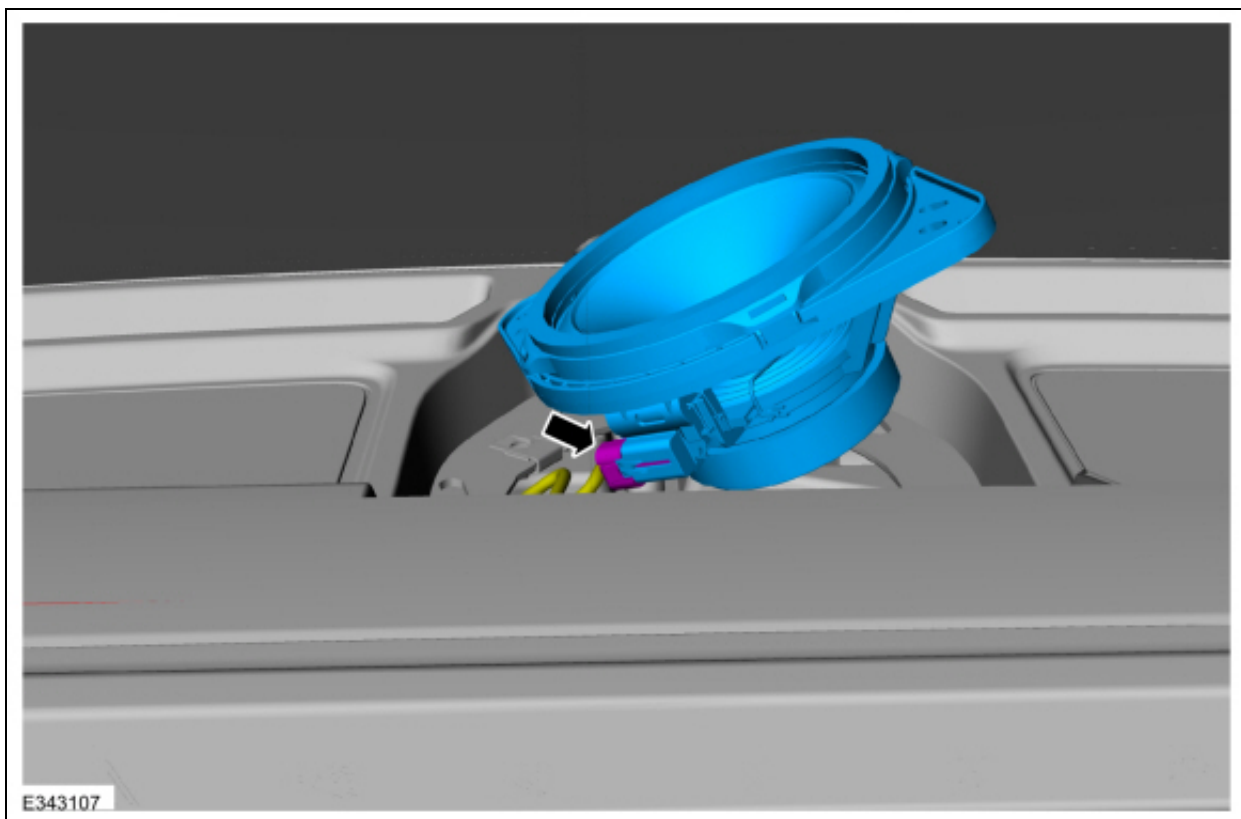

## Installation

1. To install, reverse the removal procedure.

© Copyright 2022, Ford Motor Company.

---