


## Fuel Level Sender


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the Fuel Pump and Sender Unit.  
Refer to: [Fuel Pump and Sender Unit](#) (310-01B Fuel Tank and Lines - 2.7L EcoBoost (238kW/324PS), Removal and Installation).
2. Disconnect the electrical connector.

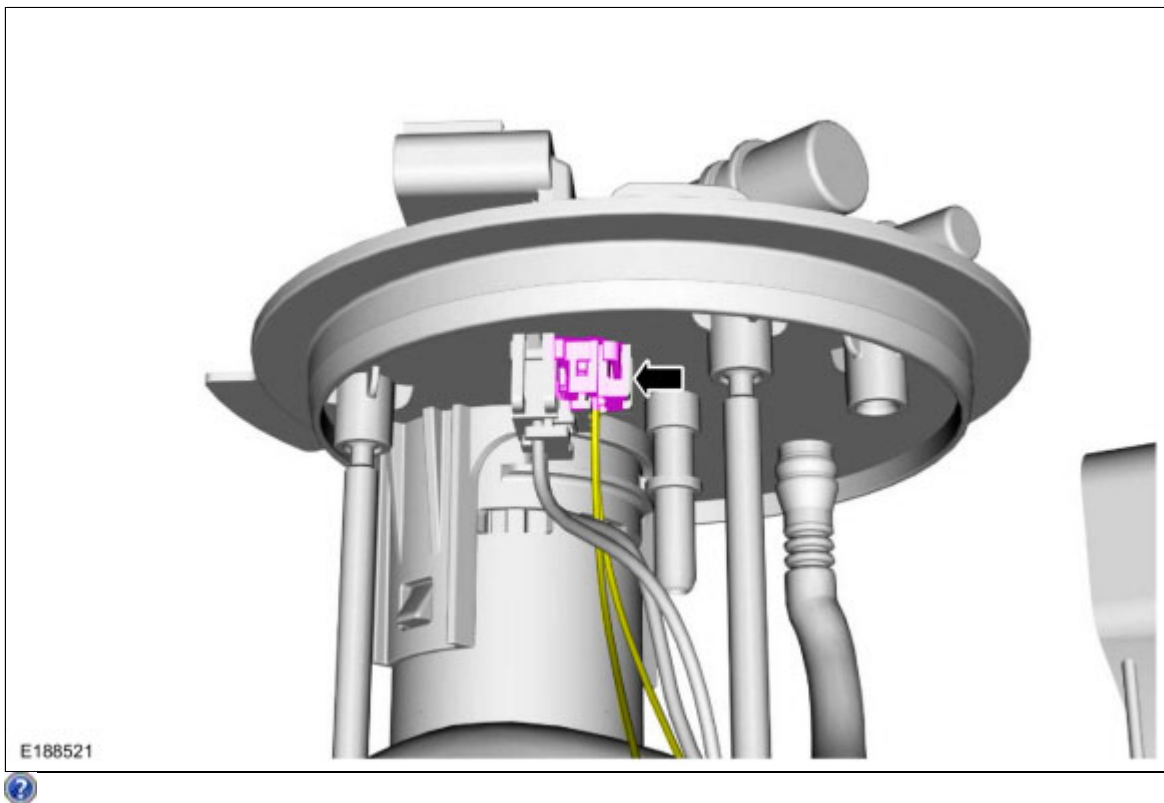

3.
  1. Release the retainer tab.
  2. Remove the Fuel Level Sender.

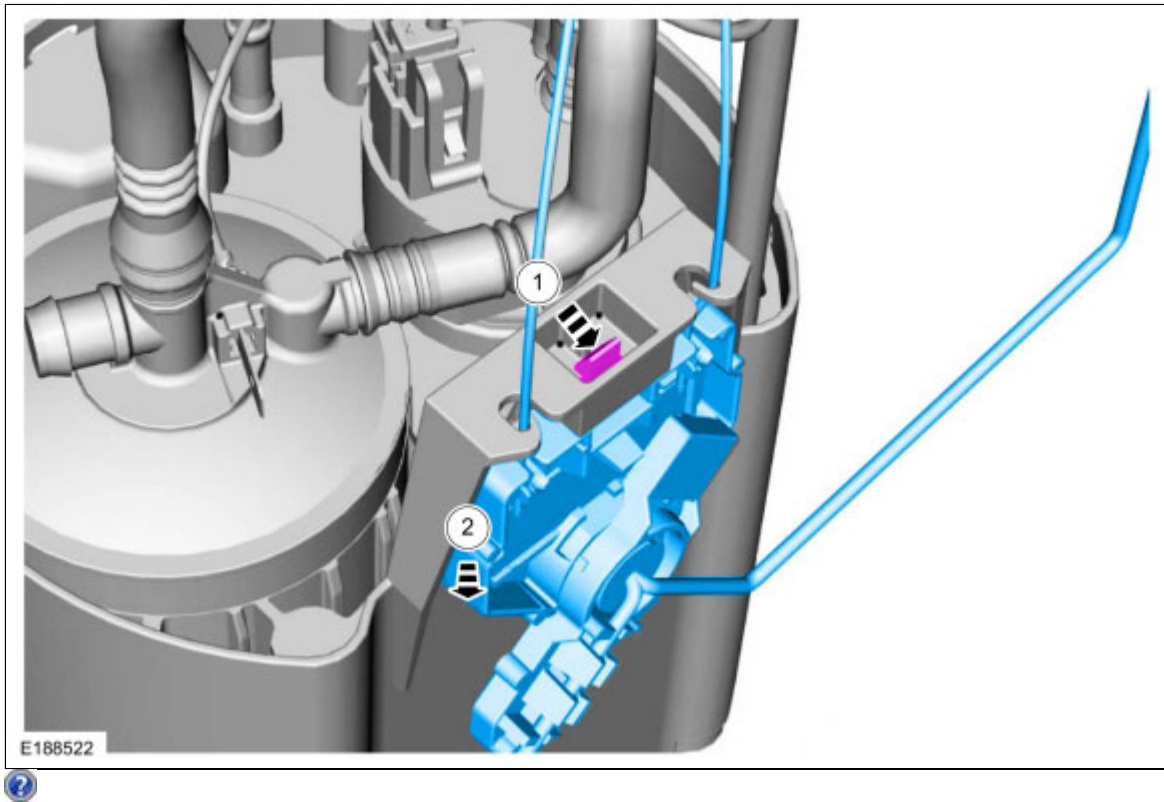

## Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company