


Fuel Pump Driver Module (FPDM)

Removal


1. **NOTE:** The fuel pump driver module is located on a bracket attached to the evaporative emission canister mounting bracket.

For fuel pump driver module component location view,
Refer to: [Fuel Charging and Controls - Component Location](#) (303-04A Fuel Charging and Controls - 2.3L EcoBoost (199kW/270PS), Description and Operation).

2. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. Disconnect the fuel pump driver module electrical connector.

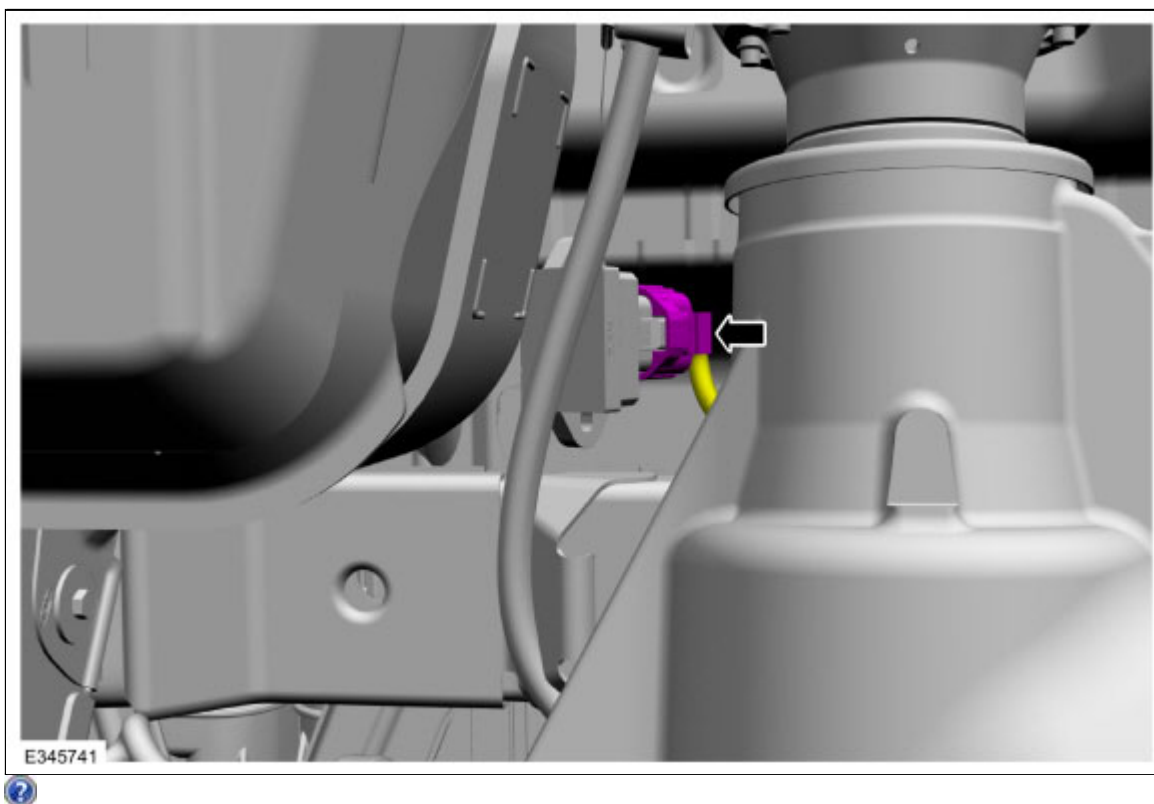


4. Release the fuel pump driver module retaining tab, then remove the fuel pump driver module from the bracket.

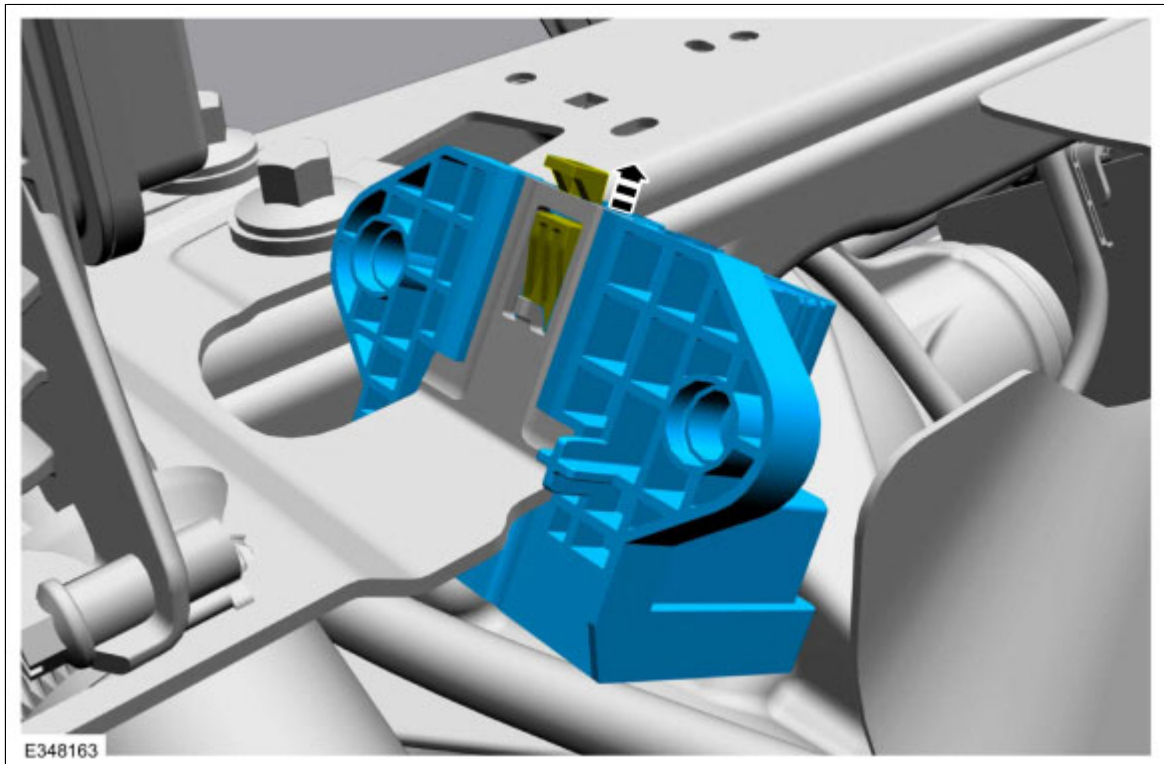


Installation

1. .Install the fuel pump driver module to the bracket until it clicks and locks into position.

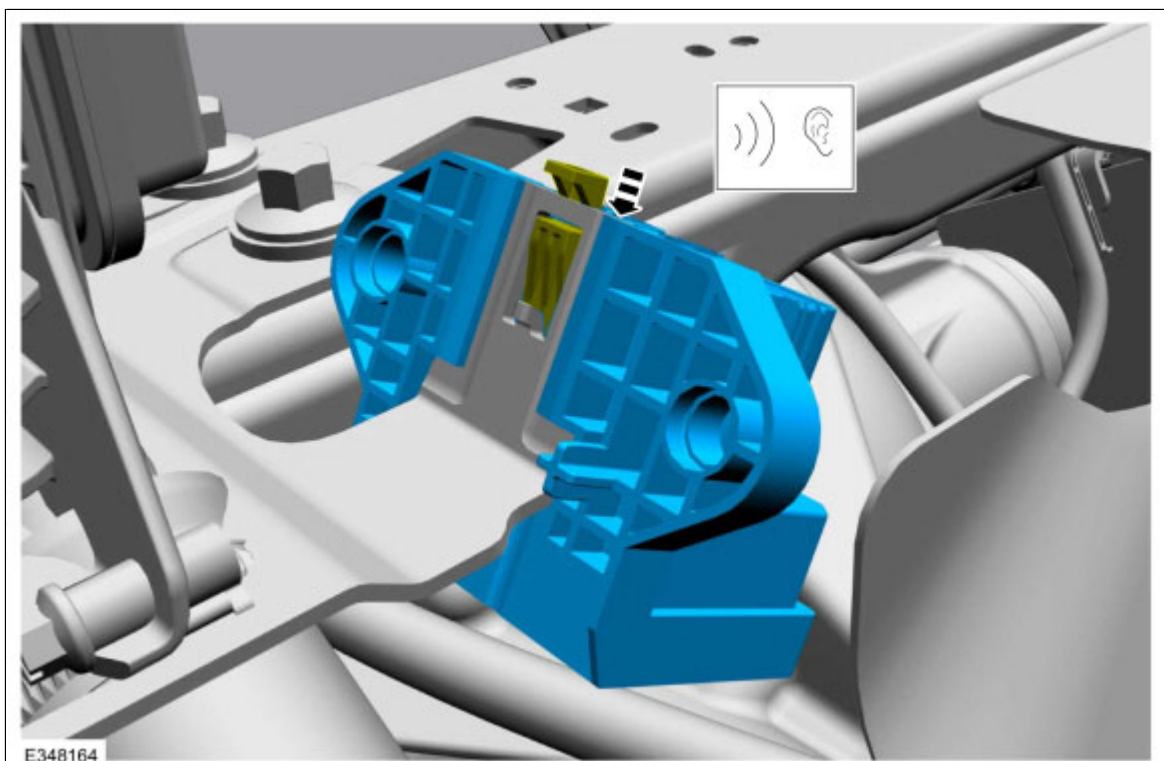

2. Connect the fuel pump driver module electrical connector.

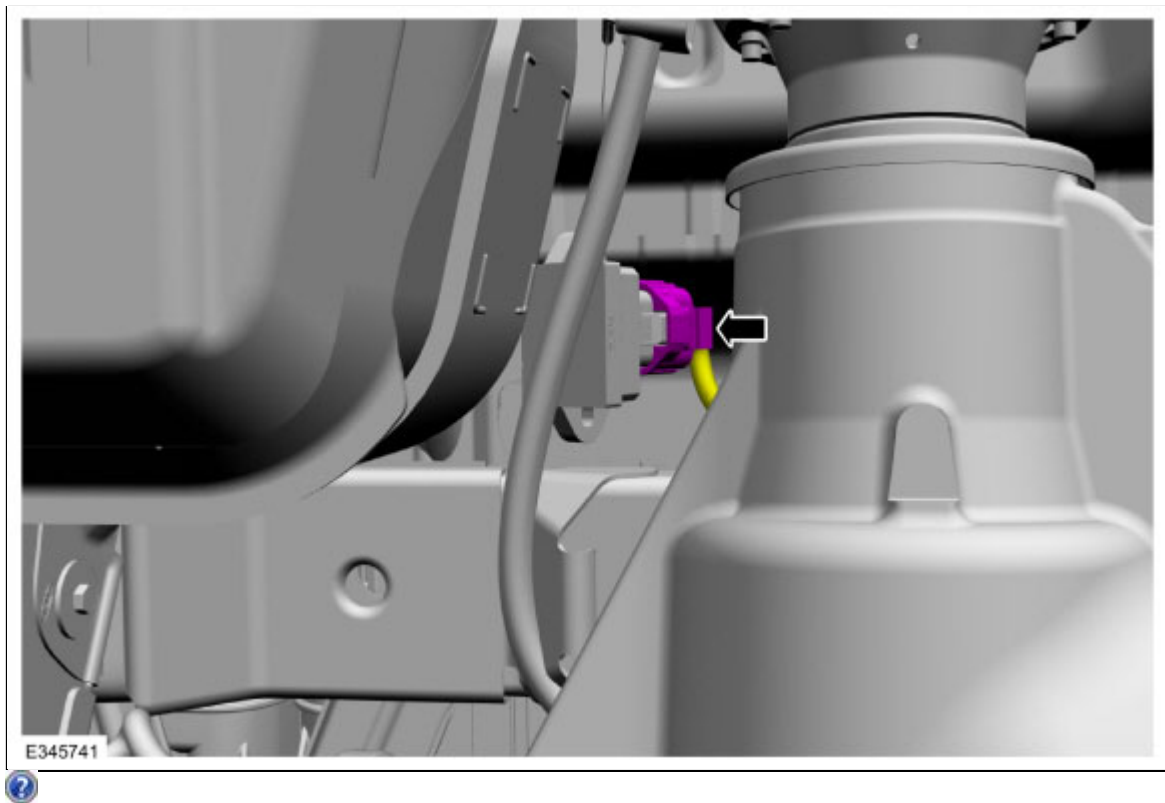

Copyright © Ford Motor Company