


Fuel Tank Draining

Draining



1.  **WARNING:** Before beginning any service procedure in this section, refer to **Safety Warnings** in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Gasoline and Gasoline-Ethanol Fuel Systems Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. Release the fuel system pressure.
Refer to: [Fuel System Pressure Release](#) (310-00A Fuel System - General Information - 2.3L EcoBoost (199kW/270PS), General Procedures).
4. Disconnect the battery.
Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).




5.

NOTICE: Only use the specified general equipment.

NOTE: Be prepared to collect escaping fluid


Loosen the clamp and disconnect the hose.

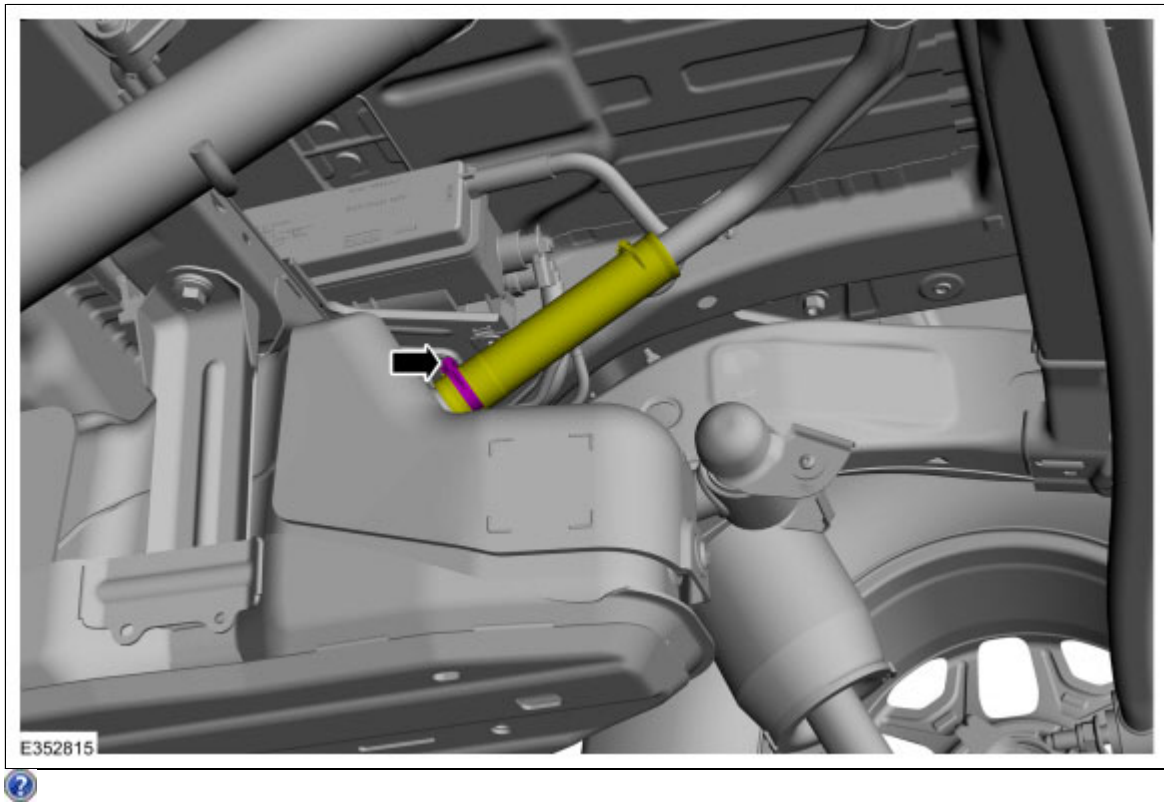

6. **NOTICE:** Make sure the open end of the hose is secured above the fluid level in the reservoir

NOTICE: Use suitable paper absorb any escaping fluid

Insert the hose from the fuel storage tanker and siphon the fuel through the hose.
Use *Special Service Tool* : 292-00004 Fuel Tanker 100 GPM

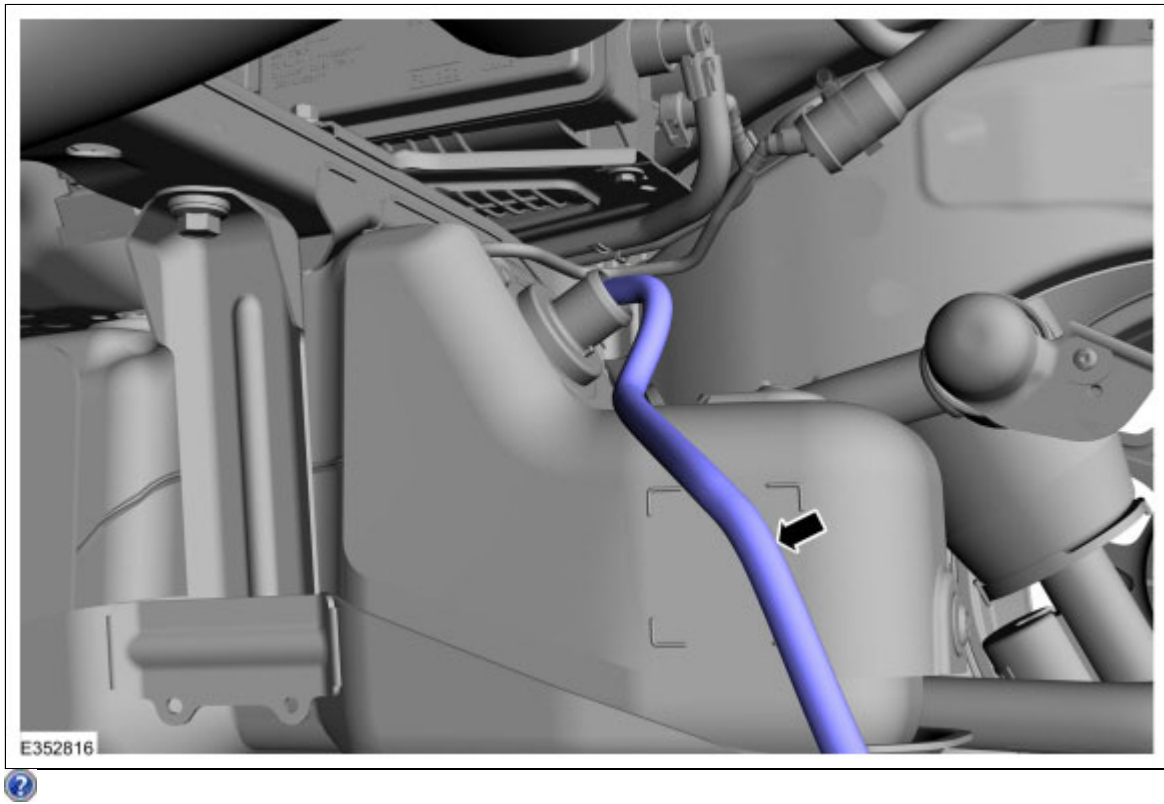

Copyright © Ford Motor Company