

Fuel Tank Pressure Sensor and Tube

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles


1. Remove the fuel tank.
Refer to: [Fuel Tank](#) (310-01B Fuel Tank and Lines - 2.7L EcoBoost (238kW/324PS), Removal and Installation).

3-Door

2. Disconnect the electrical connectors and position aside the wiring.

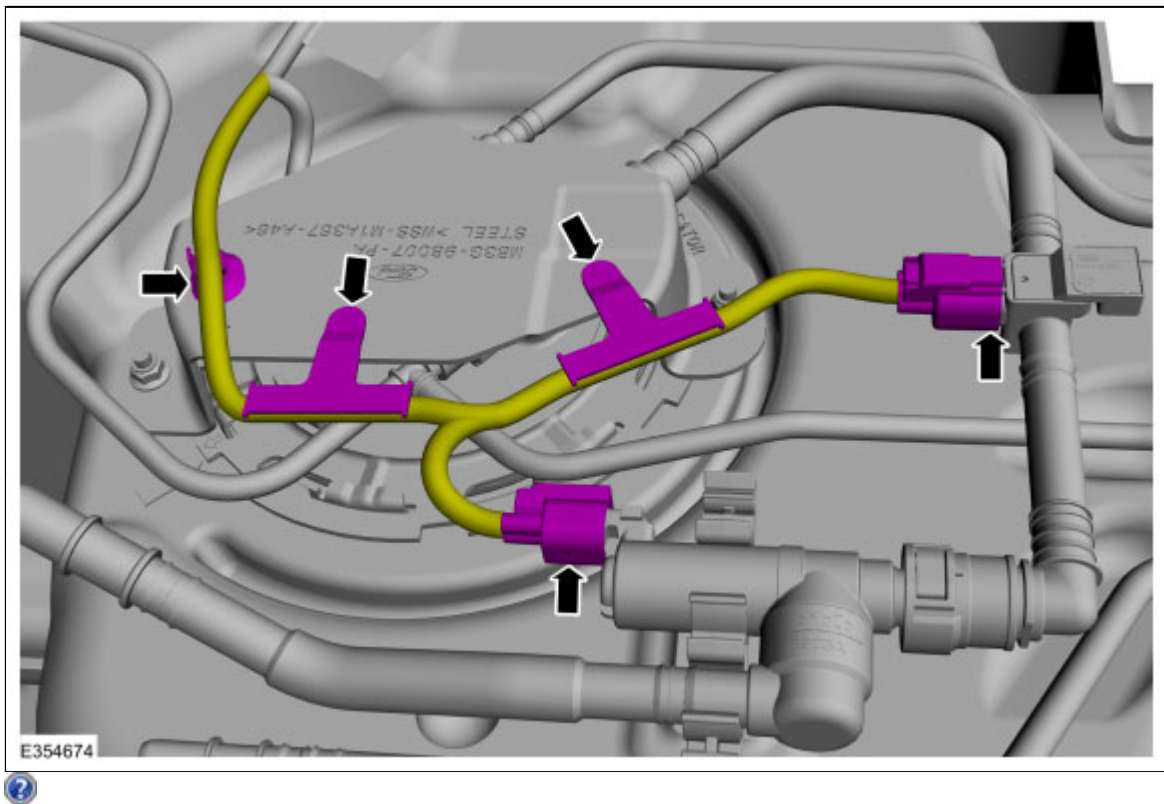


3. Remove the nuts and fuel pump sender unit shield.
Torque : 80 lb.in (9 Nm)

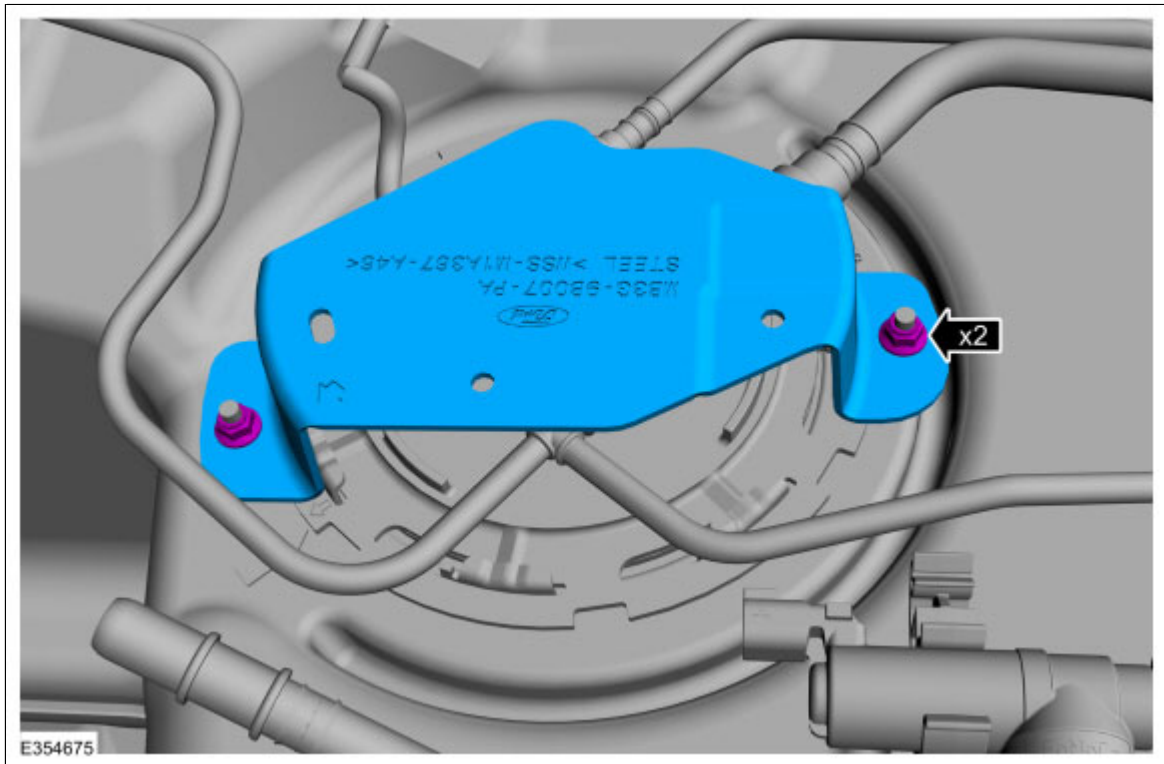

4. Disconnect the quick release couplings and remove the fuel tank pressure sensor and tube assembly.

Refer to: [Quick Release Coupling](#) (310-00B Fuel System - General Information - 2.7L EcoBoost (238kW/324PS), General Procedures).

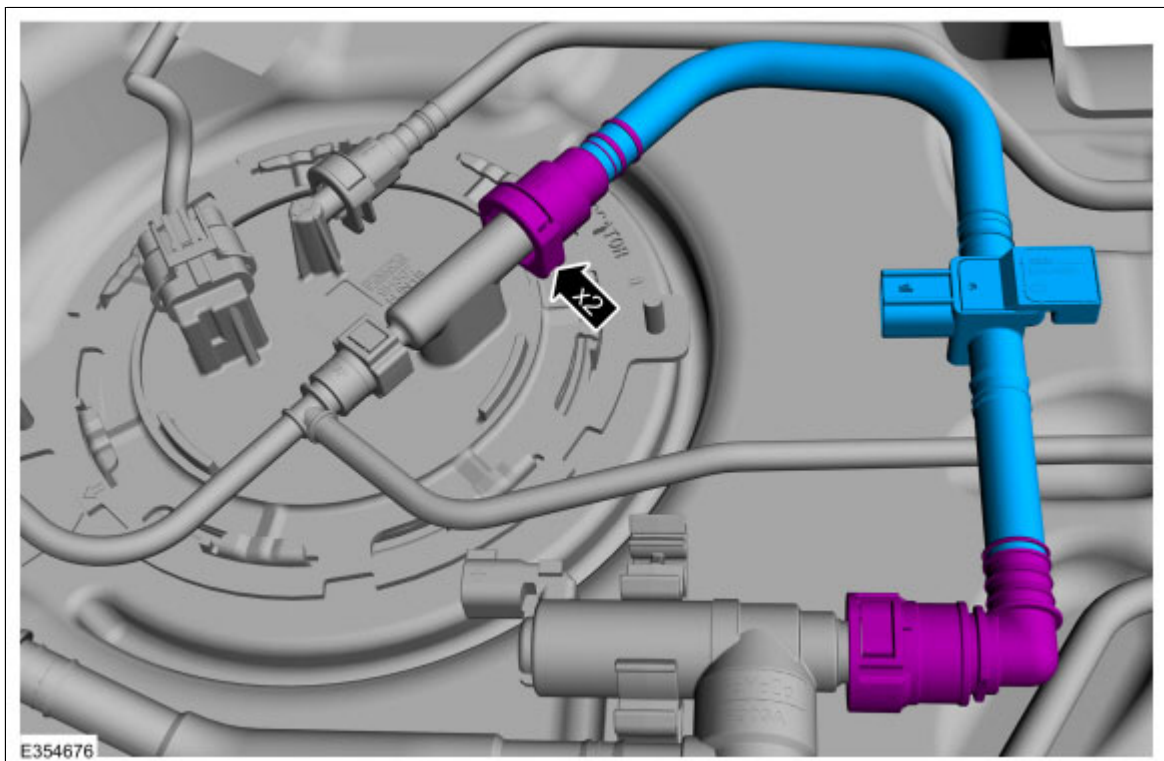


5-Door

5.

- Disconnect the electrical connector and position aside the wiring.
- Disconnect the quick release couplings and remove the fuel tank pressure sensor and tube assembly.

Refer to: [Quick Release Coupling](#) (310-00B Fuel System - General Information - 2.7L EcoBoost (238kW/324PS), General Procedures).

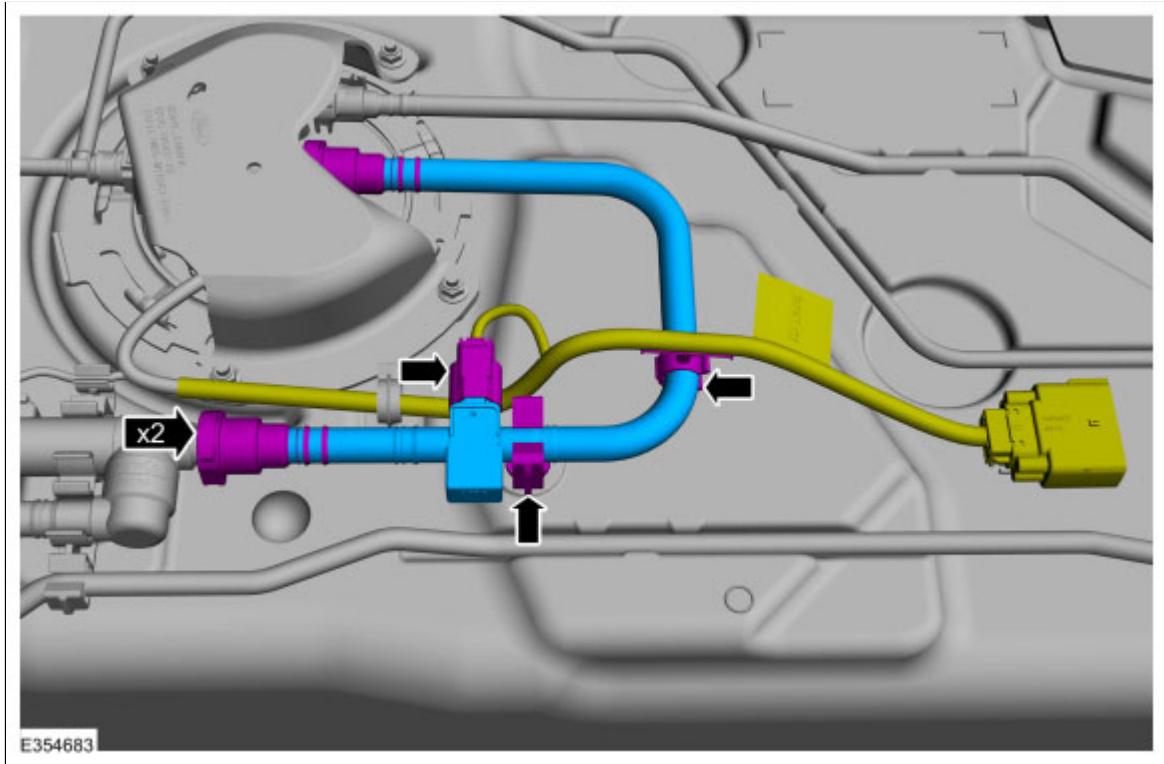

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company