

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

Ok Privacy policy

☰ MENU

[Home page](#) > [Ford](#) > Ford Bronco (2021-2022...) fuses

Ford Bronco (2021-2022...) fuses

Advertisements

*In this article, we consider the sixth generation Ford Bronco, available from 2021. Here you will find fuse box diagrams of the new **Ford Bronco 2021 and 2022**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*



Fuse Layout Ford Bronco 2021-2022...

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)



Table of Contents

Fuse Box Location

- Passenger Compartment

- Engine Compartment

Fuse Box Diagrams

- Passenger Compartment Fuse Box

- Engine Compartment Fuse Box

Fuse Box Location

Passenger Compartment

Version 1

The fuse panel is located behind the panel below the glove compartment.

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)




Version 2

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

Ok [Privacy policy](#)



Engine Compartment

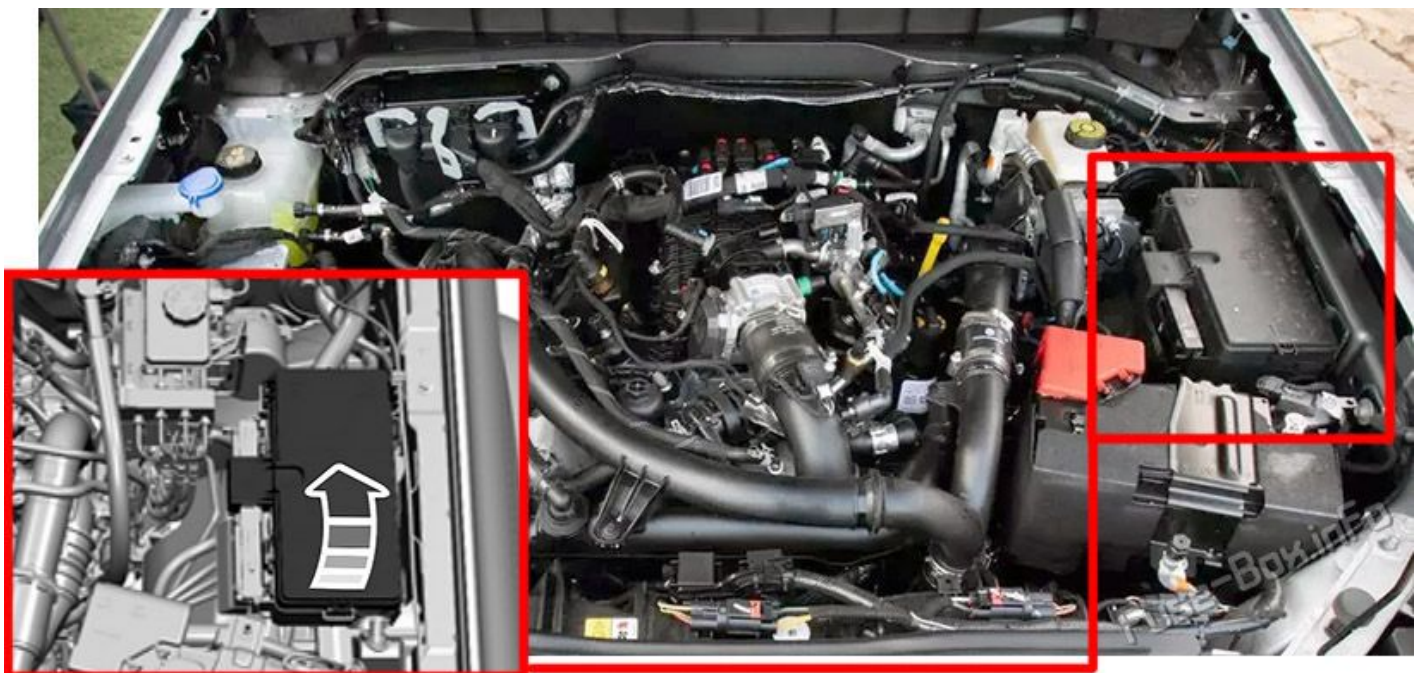

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

Ok Privacy policy

Fuse Box Diagrams

Passenger Compartment Fuse Box



Assignment of the fuses in the passenger compartment (2021-2022)

No	Amp. Rating	Protected Component
1	—	Not used.
2	10A	Power windows. DC/AC inverter.
3	7.5A	Exterior mirrors. Wireless charging module.
4	20A	Not used (spare).
5	—	Not used.

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)

7	10A	NOT used.
8	5A	Not used (spare).
9	5A	Not used (spare).
10	—	Not used.
11	—	Not used.
12	7.5A	Climate control. Gateway module.
13	7.5A	Steering column control module. Instrument cluster module.
14	15A	Not used (spare).
15	15A	Not used (spare).
16	—	Not used.
17	7.5A	Not used (spare).
18	7.5A	Not used (spare).
19	5A	Ignition switch. Headlamps.
20	5A	Telematics modem.
21	5A	In-vehicle temperature and humidity sensor.
22	5A	Not used.
23	30A	Not used (spare).


We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)

25	20A	Not used (spare).
26	30A	Not used (spare).
27	30A	Not used (spare).
28	30A	Not used (spare).
29	15A	Not used (spare).
30	5A	Brake on-off switch.
31	10A	Terrain management switch. Integrated control panel switch. Driveline and chassis controls switch panel. 12 inch center display. Radio frequency receiver module.
32	20A	Audio control module.
33	—	Not used.
34	30A	Run/start relay.
35	5A	Not used (spare).
36	15A	Automatic high beam. Image processing module A.
37	20A	Auto-dimming interior mirror. Parking assist control module. Heated steering wheel.
38	30A	Not used (Circuit Breaker).

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

Ok Privacy policy

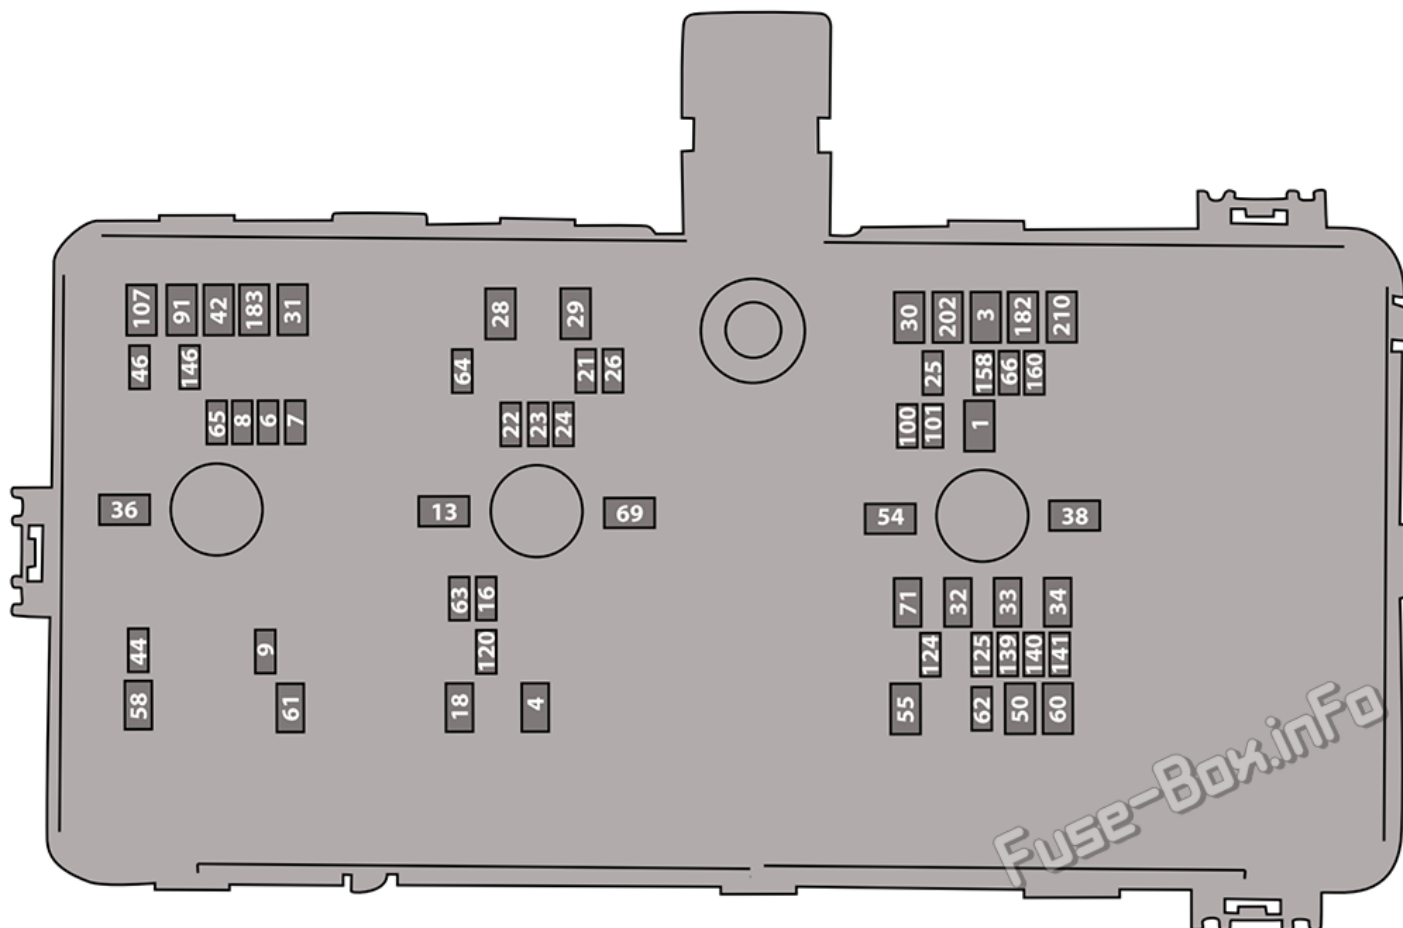

Assignment of the fuses in the engine compartment (2021-2022)

No	Amp. Rating	Protected Component
1	30A	Body control module - battery power in feed 1.
3	30A	Body control module - battery power in feed 2.
4	30A	Fuel pump.
6	25A	Powertrain control module power.
7	30A	Powertrain components.
8	20A	Powertrain components.

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)

13	40A	Blower motor control module.
16	10A	Rear windshield washer.
18	30A	Starter motor.
21	10A	Not used (spare).
22	10A	360 degree camera module.
23	10A	Anti-lock brake system run-start feed.
24	10A	Powertrain control module. Power steering module.
25	10A	Blind spot information system. Rear view camera. Adaptive cruise control. Driveline control module.
26	15A	Transmission control module.
28	60A	Anti-lock brake system valves.
29	60A	Anti-lock brake system pump.
30	30A	Driver power seat.
31	30A	Passenger power seat.
32	20A	Auxiliary power point.
33	20A	Auxiliary power point.
34	20A	Auxiliary power point.
36	40A	2021: 150 watt DC/AC inverter.

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)



42	30A	Trailer brake control module.
44	10A	Brake on-off switch.
46	20A	SYNC module.
50	40A	Heated rear windshield.
54	40A	Driveline control module.
55	30A	Trailer tow park lamp relay.
58	20A	Trailer tow backup lamps.
60	30A	Upfitter switch #1.
61	15A	Upfitter switch #2.
62	10A	Upfitter switch #3.
63	10A	Upfitter switch #4.
64	10A	Upfitter switch #5.
65	10A	Upfitter switch #6.
66	10A	Stability bar disconnect module.
69	30A	Front windshield wiper.
71	30A	Rear windshield wiper.
91	40A	Trailer tow light module.
100	20A	Left-hand headlamps.
101	20A	Right-hand headlamps.

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)

120	10A	Fuel injectors (2.7L).
124	5A	Not used (spare).
125	10A	USB smart charger 1.
139	5A	USB smart charger 2.
140	5A	Not used (spare).
141	5A	Not used (spare).
146	20A	Amplifier.
158	10A	Stability bar disconnect module run/start.
160	10A	Smart data link control.
182	60A	Driver door module.
183	60A	Passenger door module.
202	60A	Body control module B+.
210	30A	Body control module start stop.

Learn more:

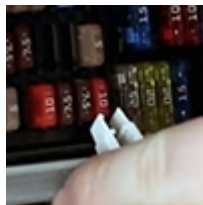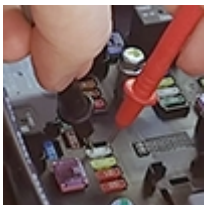

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)



-
- [How to check the fuses?](#)
 - [How to replace a blown fuse?](#)
 - [Why do car fuses blow?](#)
 - [Types of automotive fuses](#)

[Acura](#)

[Alfa Romeo](#)

[Audi](#)

[BMW](#)

[Buick](#)

[Cadillac](#)

[Chevrolet](#)

[Chrysler](#)

[Citroën](#)

[Dodge](#)

[Fiat](#)

[Ford](#)

[GMC](#)

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)

[Infiniti](#)

[Isuzu](#)

[Jeep](#)

[KIA](#)

[Land Rover](#)

[Lexus](#)

[Lincoln](#)

[Mazda](#)

[Mercedes-Benz](#)

[Mercury](#)

[Mitsubishi](#)

[Nissan](#)

[Oldsmobile](#)

[Opel / Vauxhall](#)

[Peugeot](#)

[Pontiac](#)

[Porsche](#)

[Renault](#)

[Saab](#)

[Saturn](#)

[Scion](#)

[SEAT](#)

[Skoda](#)

[Smart](#)

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#) [Privacy policy](#)

[Toyota](#)

[Volkswagen](#)

[Volvo](#)

[About](#) [Contact](#) [Use of Cookies](#)

Fuse Box Diagrams © 2022

All marks are the property of their respective holders.

Disclaimer: all materials are provided for information only. For qualified repairs, contact an authorized service center.