

Satellite Radio / Global Positioning System (GPS) Antenna

Special Tool(s) / General Equipment

Interior Trim Remover

Removal

NOTE: Removal steps in this procedure may contain installation details.

Vehicles equipped with a convertible roof


1. Lower the convertible roof.

Vehicles equipped with a removable hard roof

2. Remove the hard roof.


3-Door

3. On both sides.
Remove the overhead speaker grille.
Use the General Equipment: Interior Trim Remover

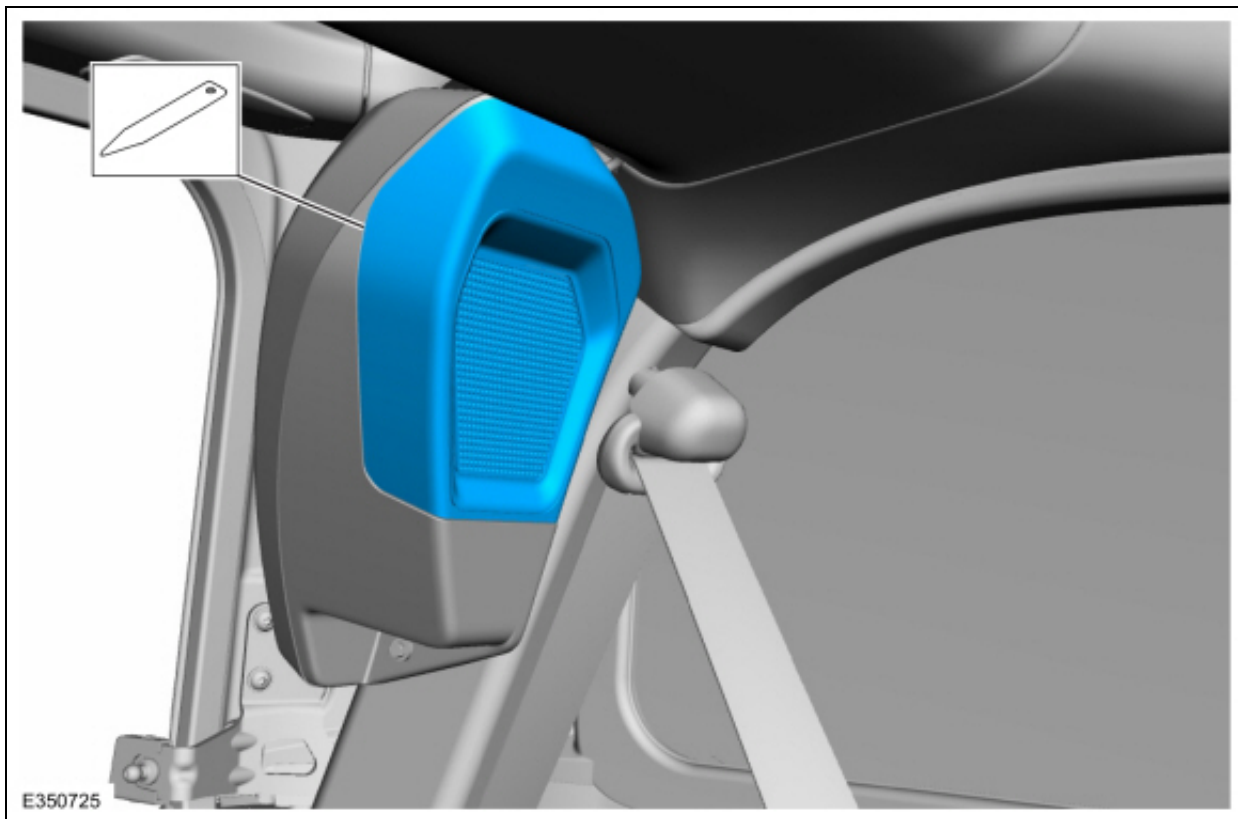


4. On both sides.


Remove the overhead speaker screw, disconnect the electrical connector and route out the wiring harness.

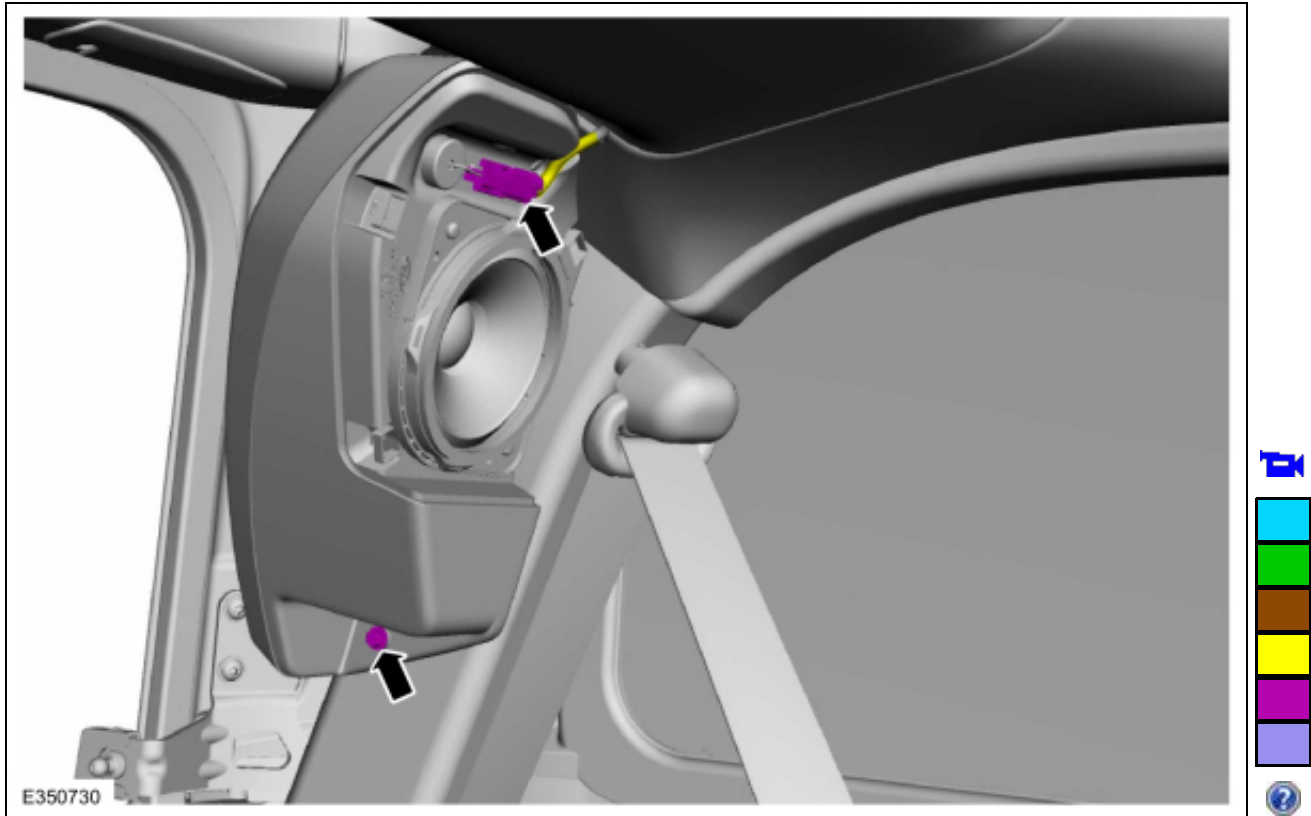


5. On both sides.
Remove the screws and the overhead speaker cabinet.

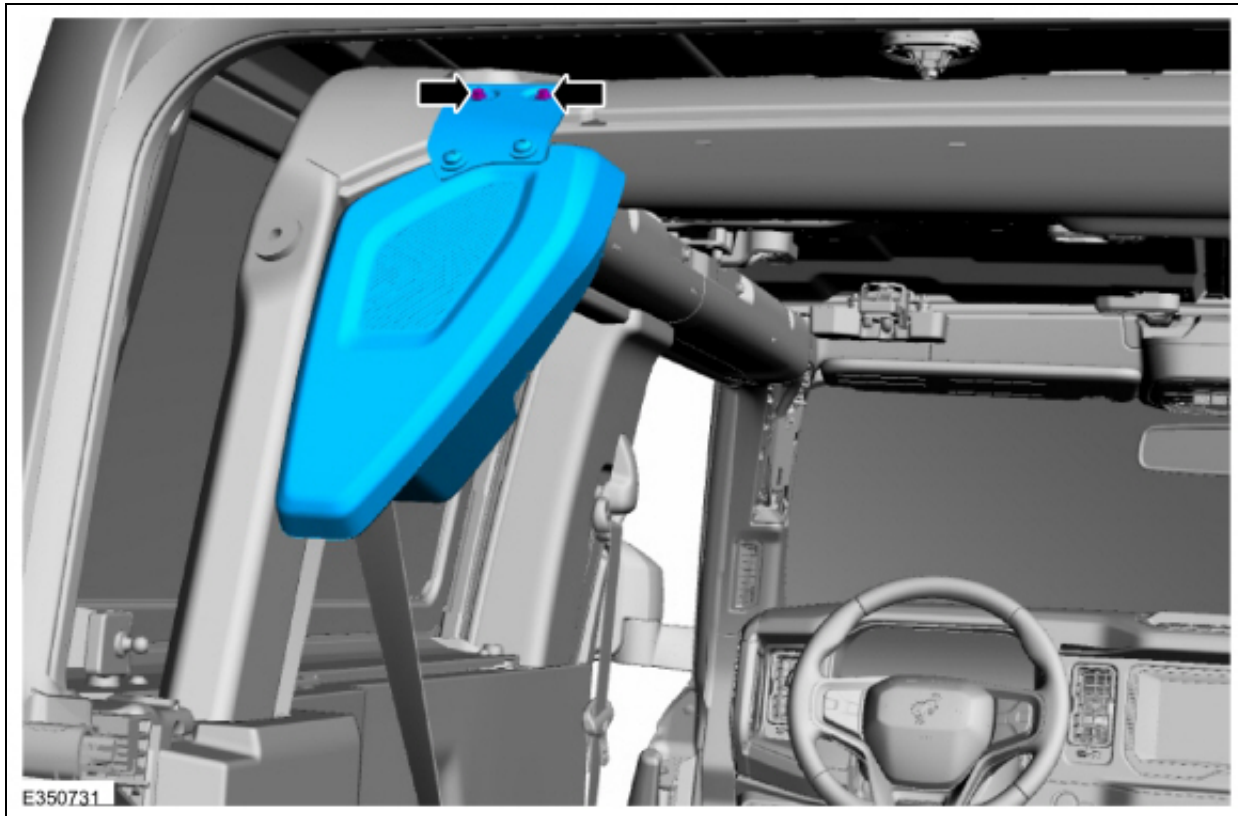

6. On both sides.
Remove the LH upper rail center trim panel.
 1. Remove the screws.
Torque: 18 lb.in (2 Nm)
 2. Release the clips.
Use the General Equipment: Interior Trim Remover

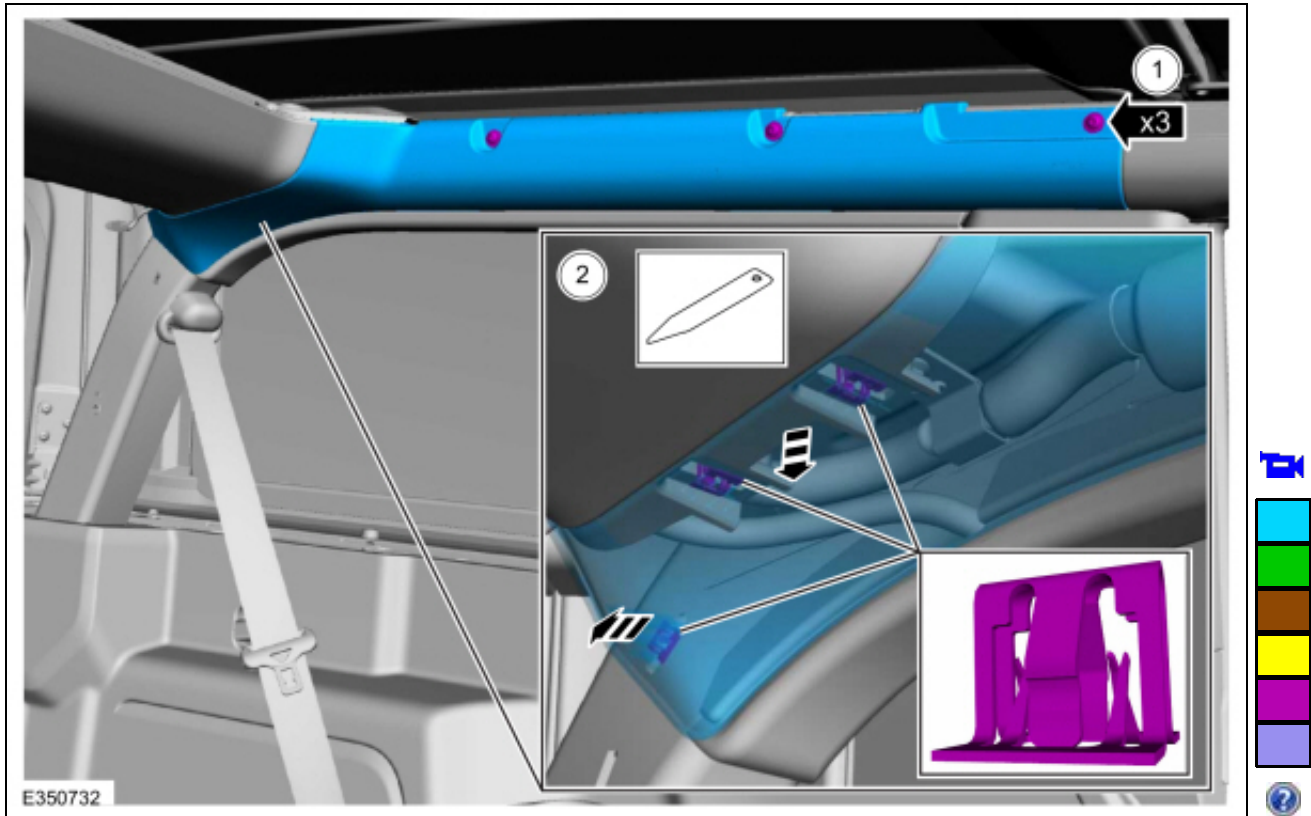


7. Remove the rear header trim panel.
1. Release the clips.
 2. Disconnect the interior lamp electrical connector.

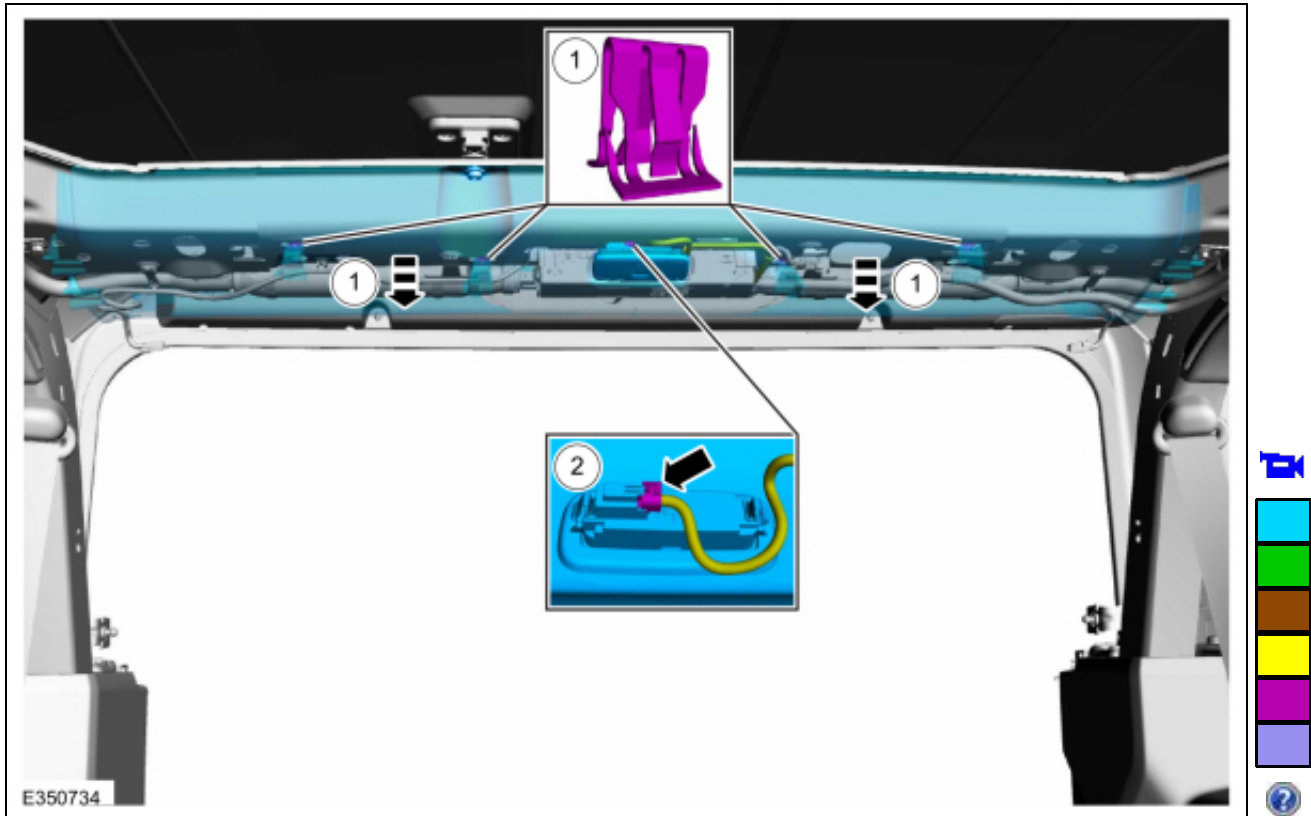


5-Door


8. On both sides.
Remove the overhead speaker grille.
Use the General Equipment: Interior Trim Remover

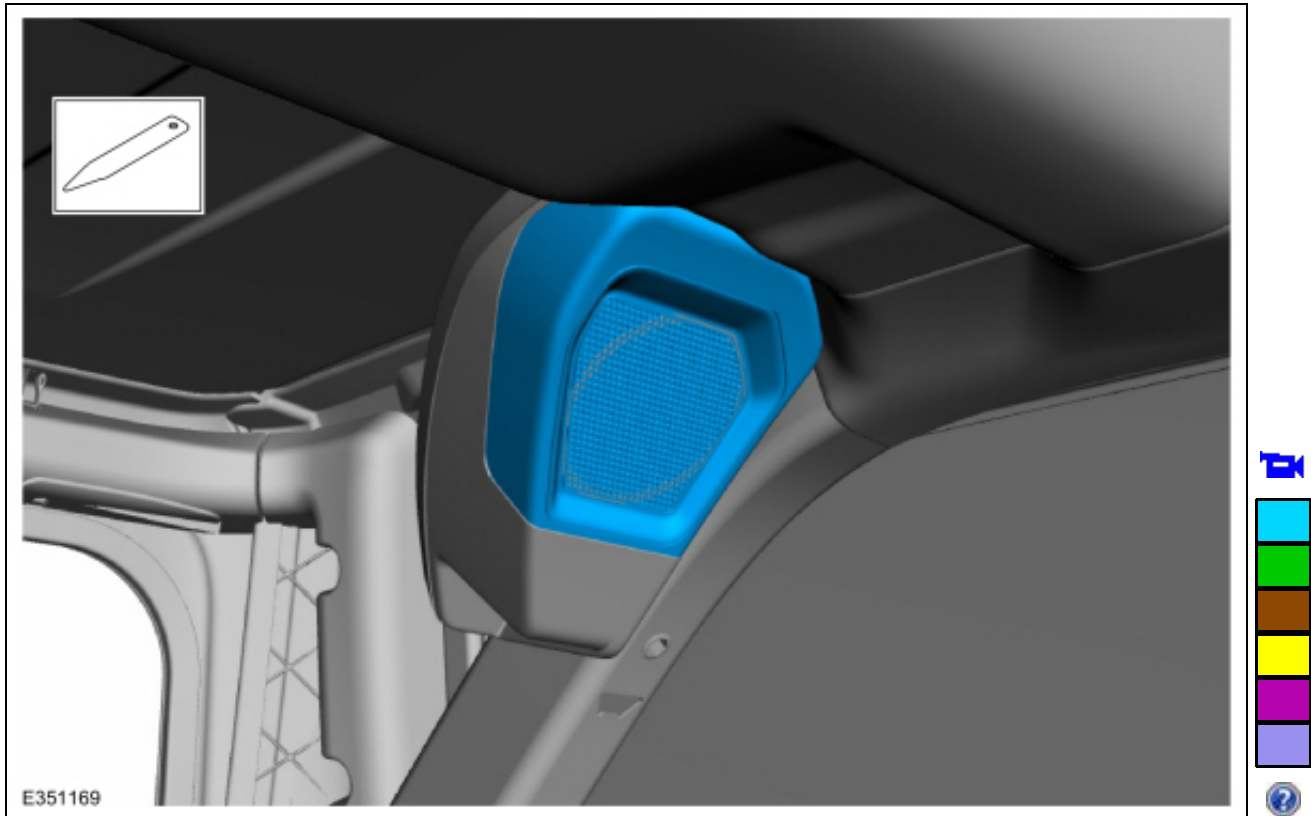


9. On both sides.
Remove the overhead speaker screw, disconnect the electrical connector and route out the wiring harness.

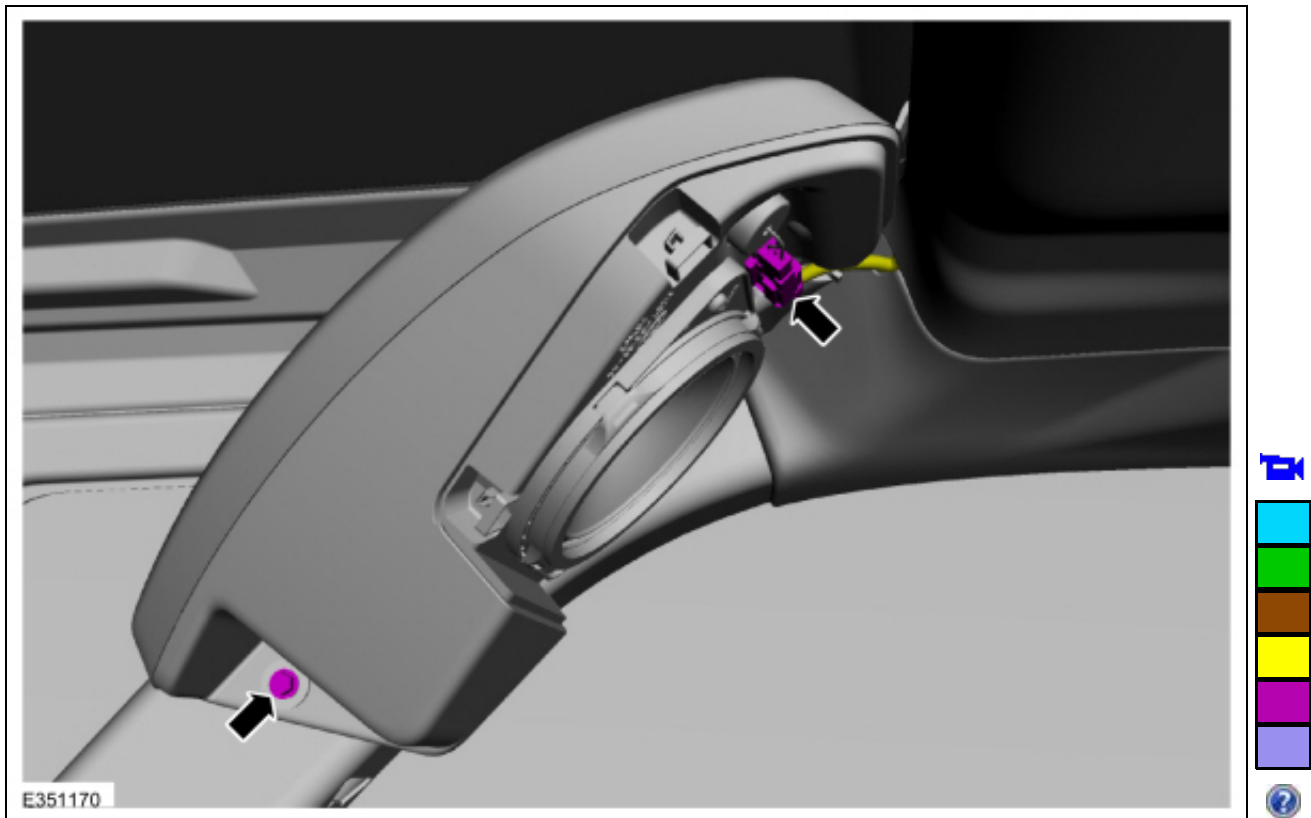


10. On both sides.
Remove the screws and the overhead speaker cabinet.

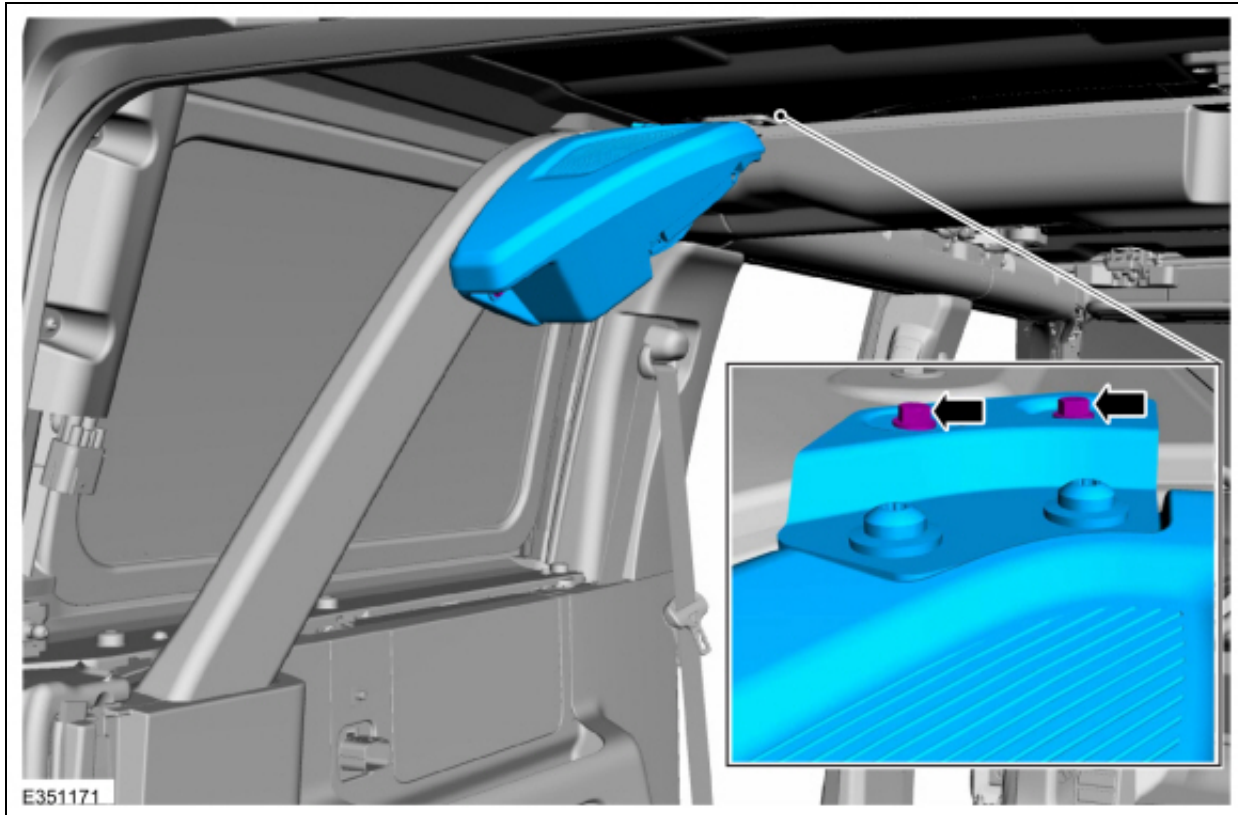

11. On both sides.
Remove the screws and the upper rail rear trim panel.

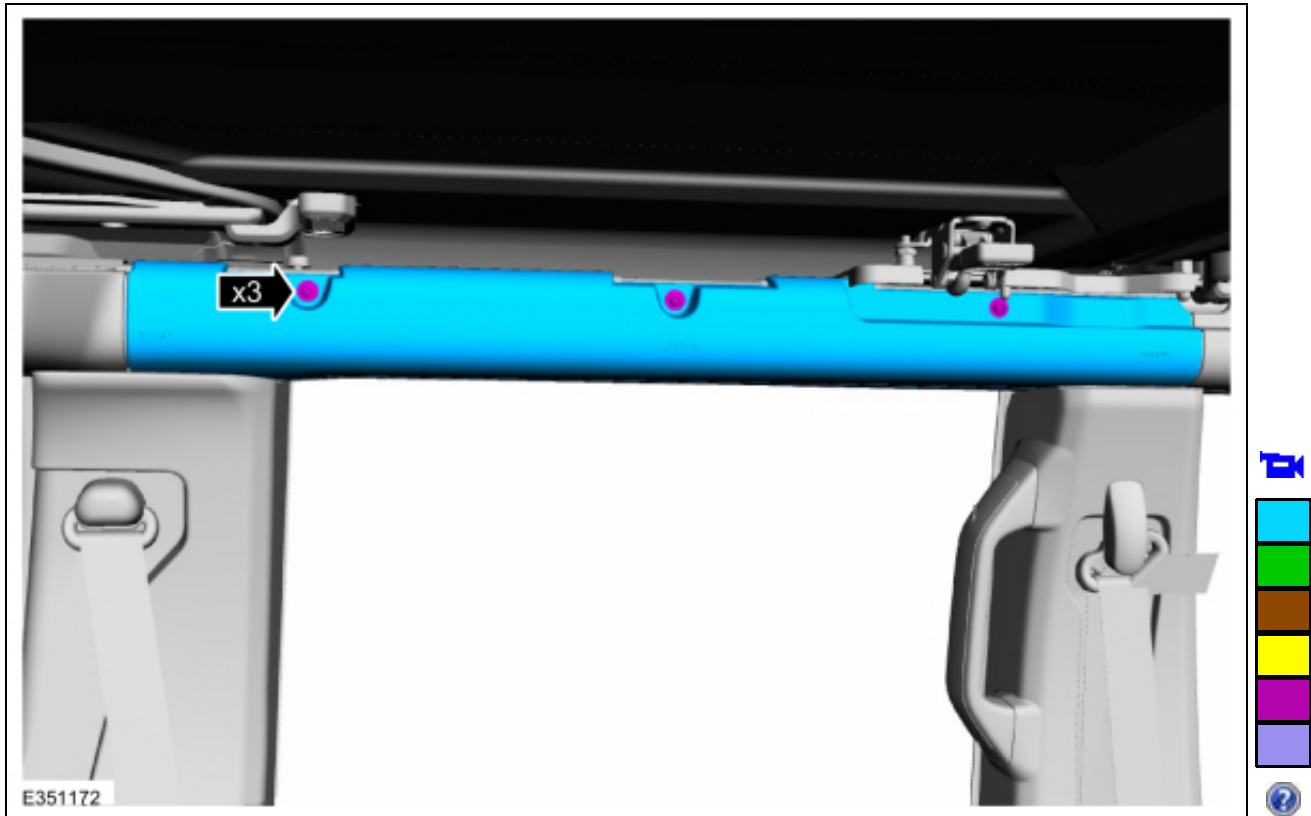


12. On both sides.
Release the clips and remove the upper rail corner trim panel.

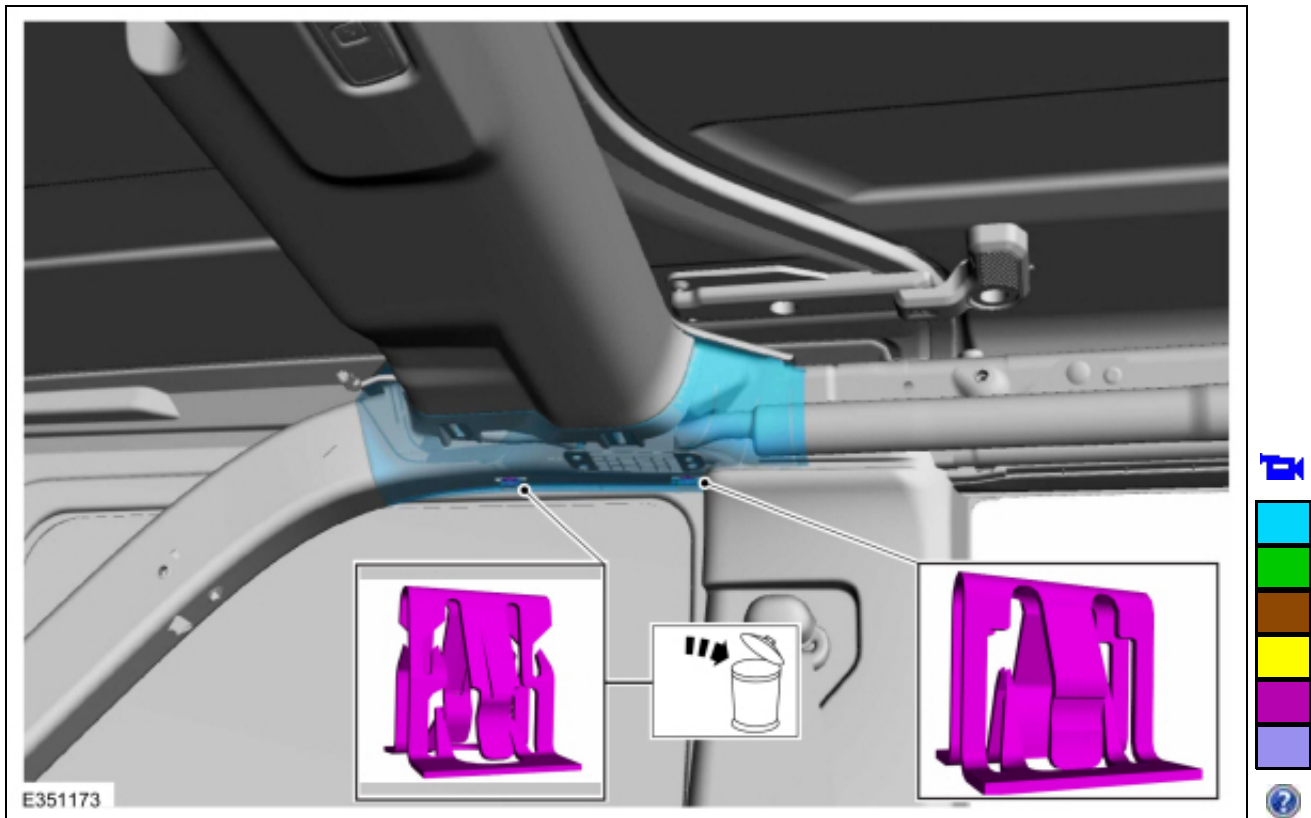


13.

Remove the rear header trim panel.


1. Release the clips.
2. Disconnect the interior lamp electrical connector.

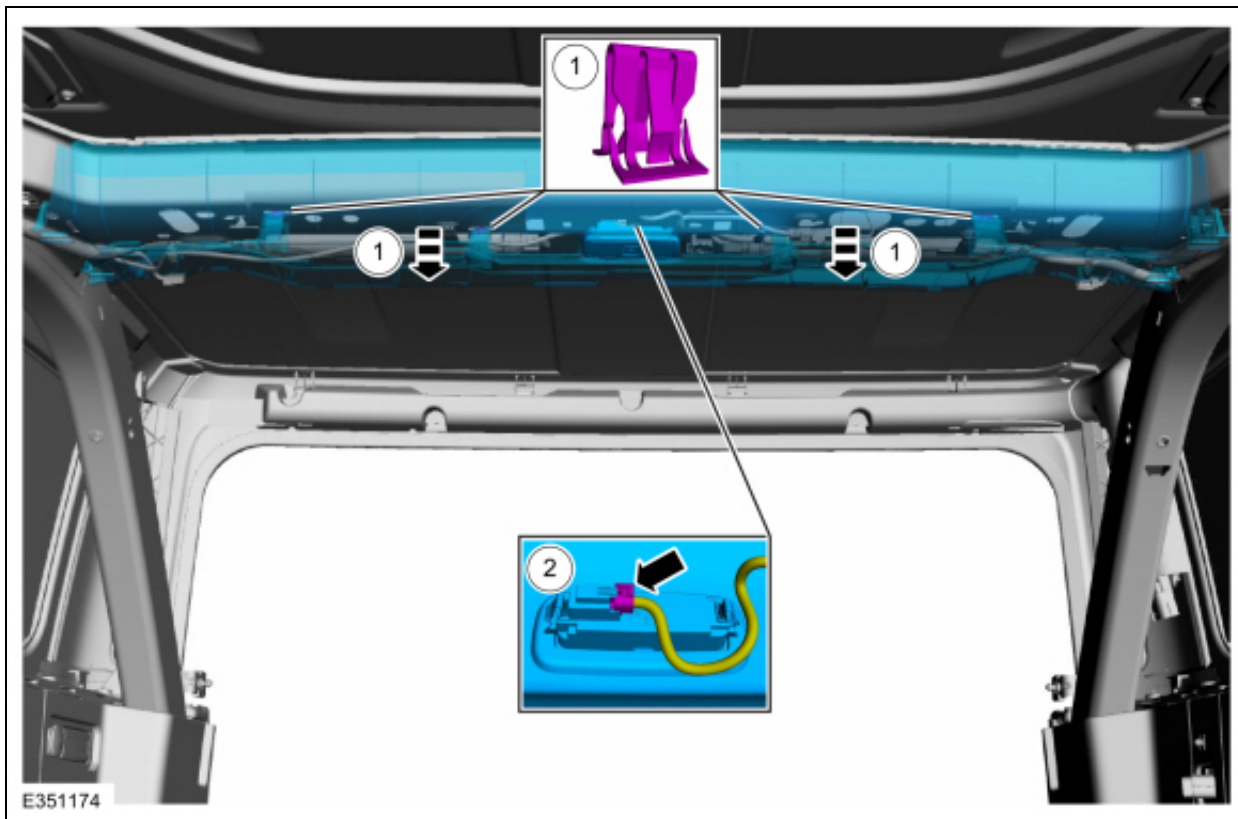**All vehicles**

14. Disconnect the satellite radio / GPS antenna cable connector.

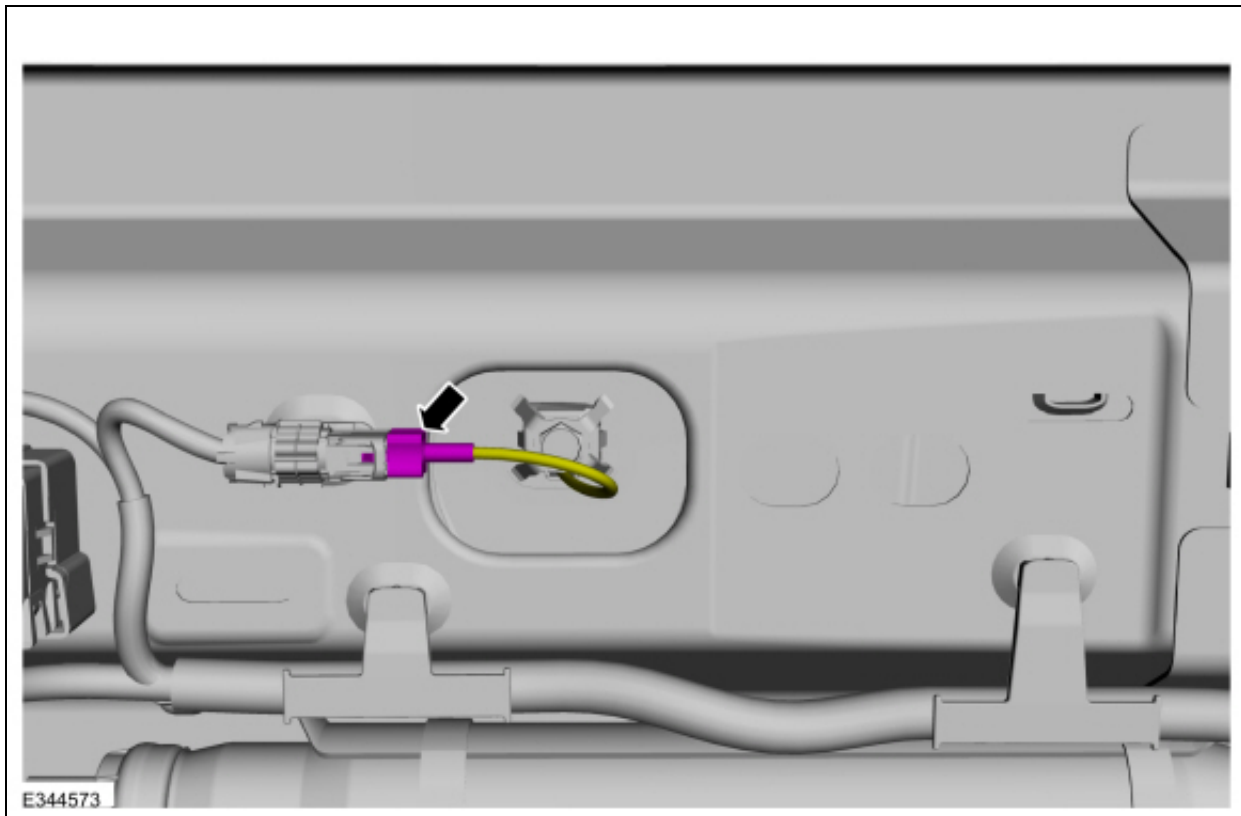


15. Remove the bolt, the spring cage, release the tabs and remove the satellite radio / GPS antenna.

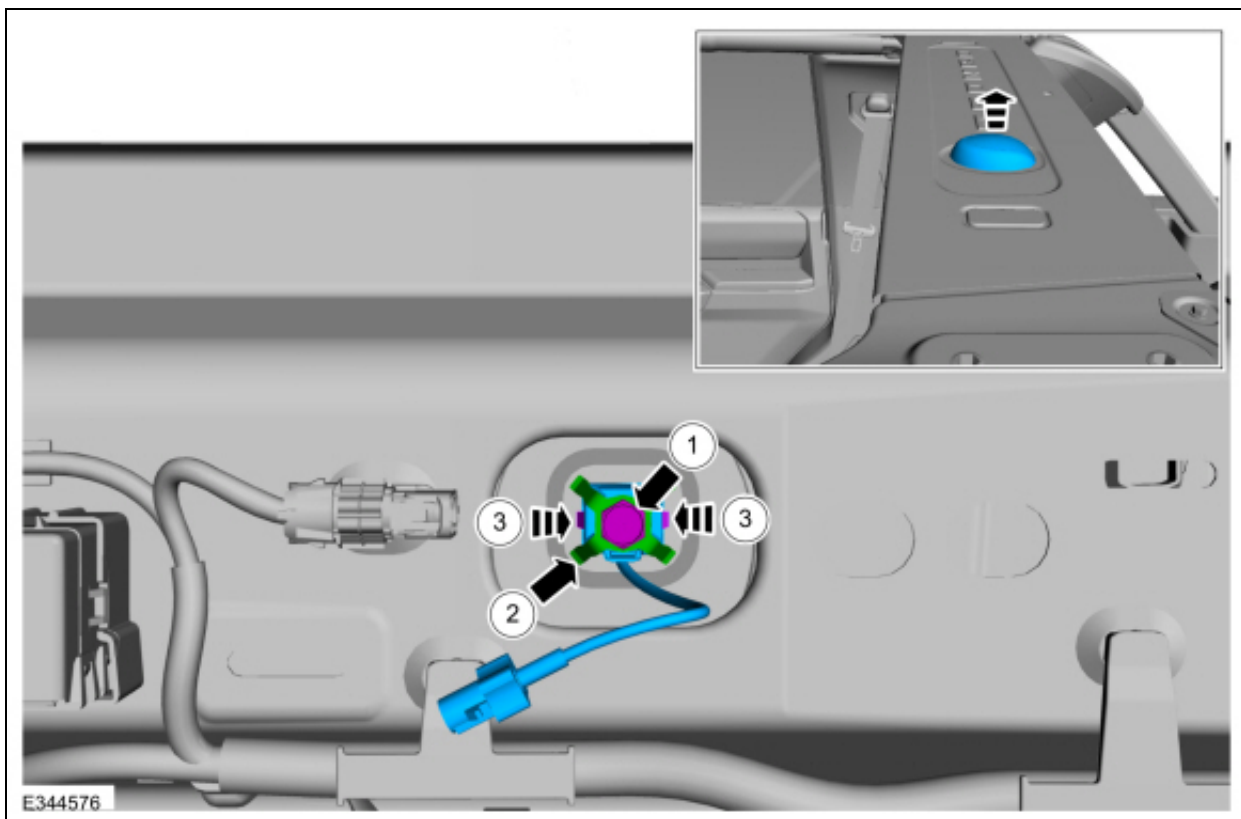


Installation

NOTE: *If installing a new satellite radio / GPS antenna it is not necessary to remove the bolt from the satellite radio / GPS antenna antenna base.*

1. Install the harness through the rear roof bow opening and push down until fully seated.

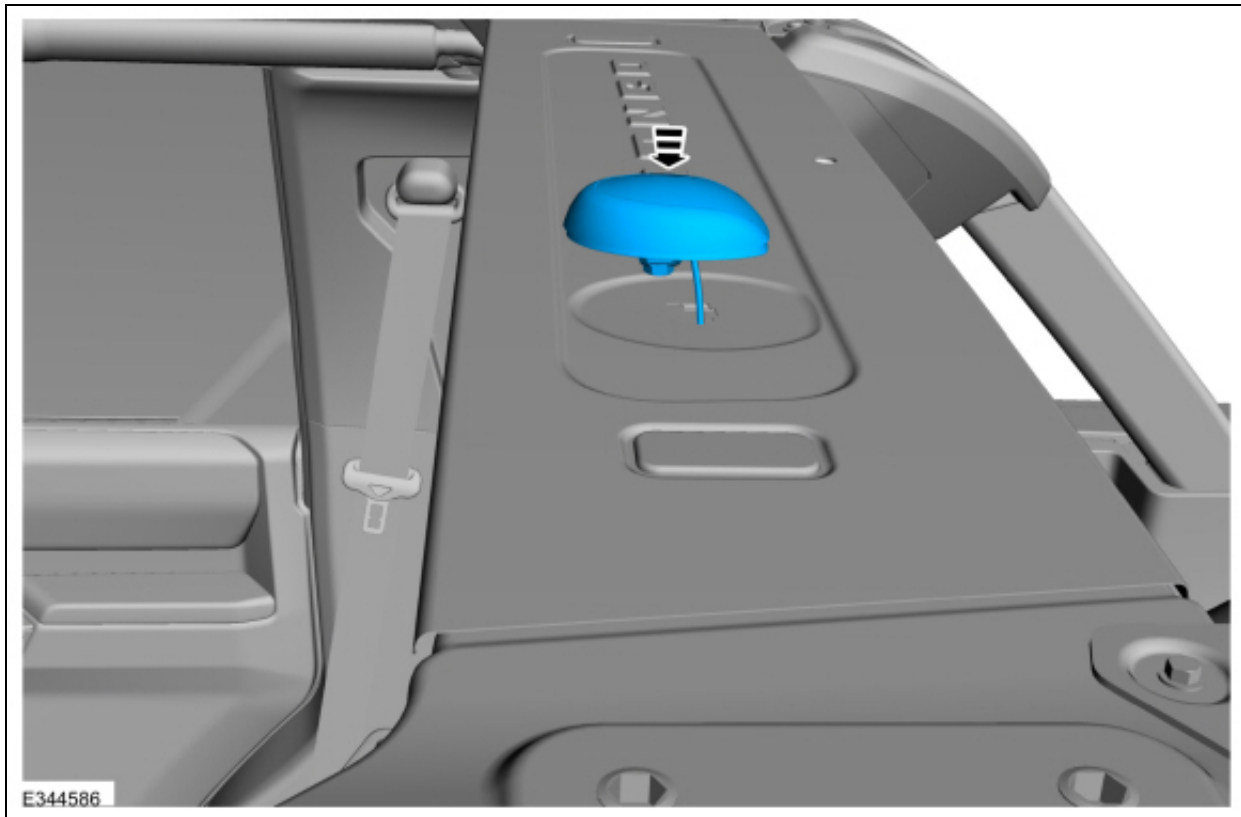

2. Connect the satellite radio / GPS antenna cable connector.

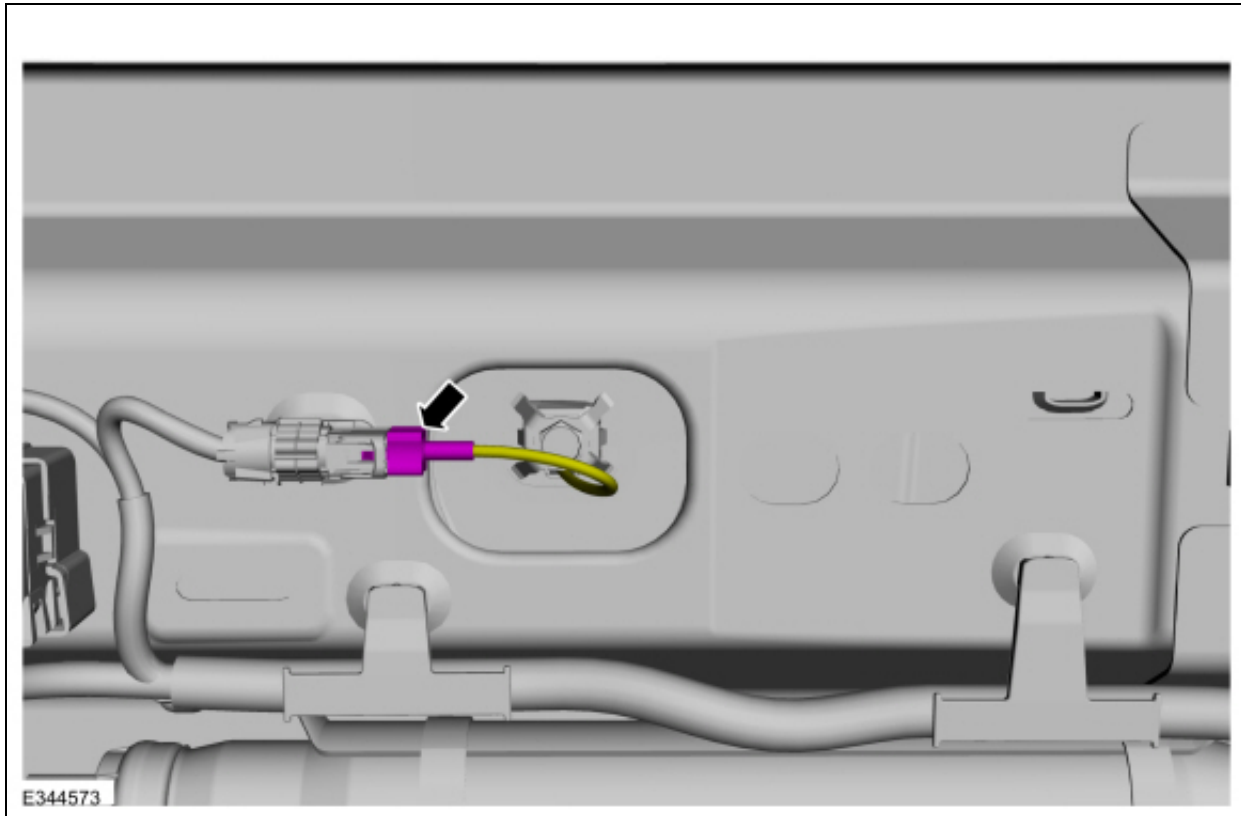

3. To install, reverse the removal procedure.

© Copyright 2022, Ford Motor Company.